
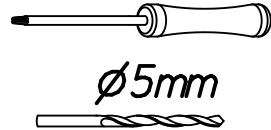
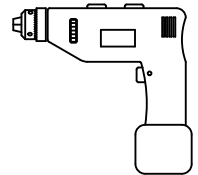
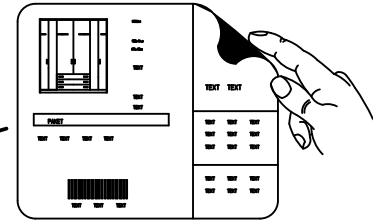
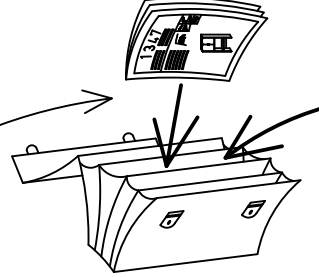



1.

M1520_03



rauch

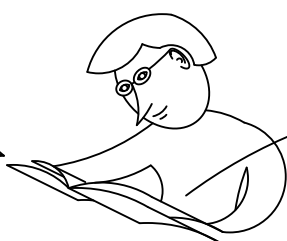

ø5mm

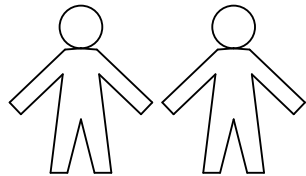


ABD-FOLIE
147x46

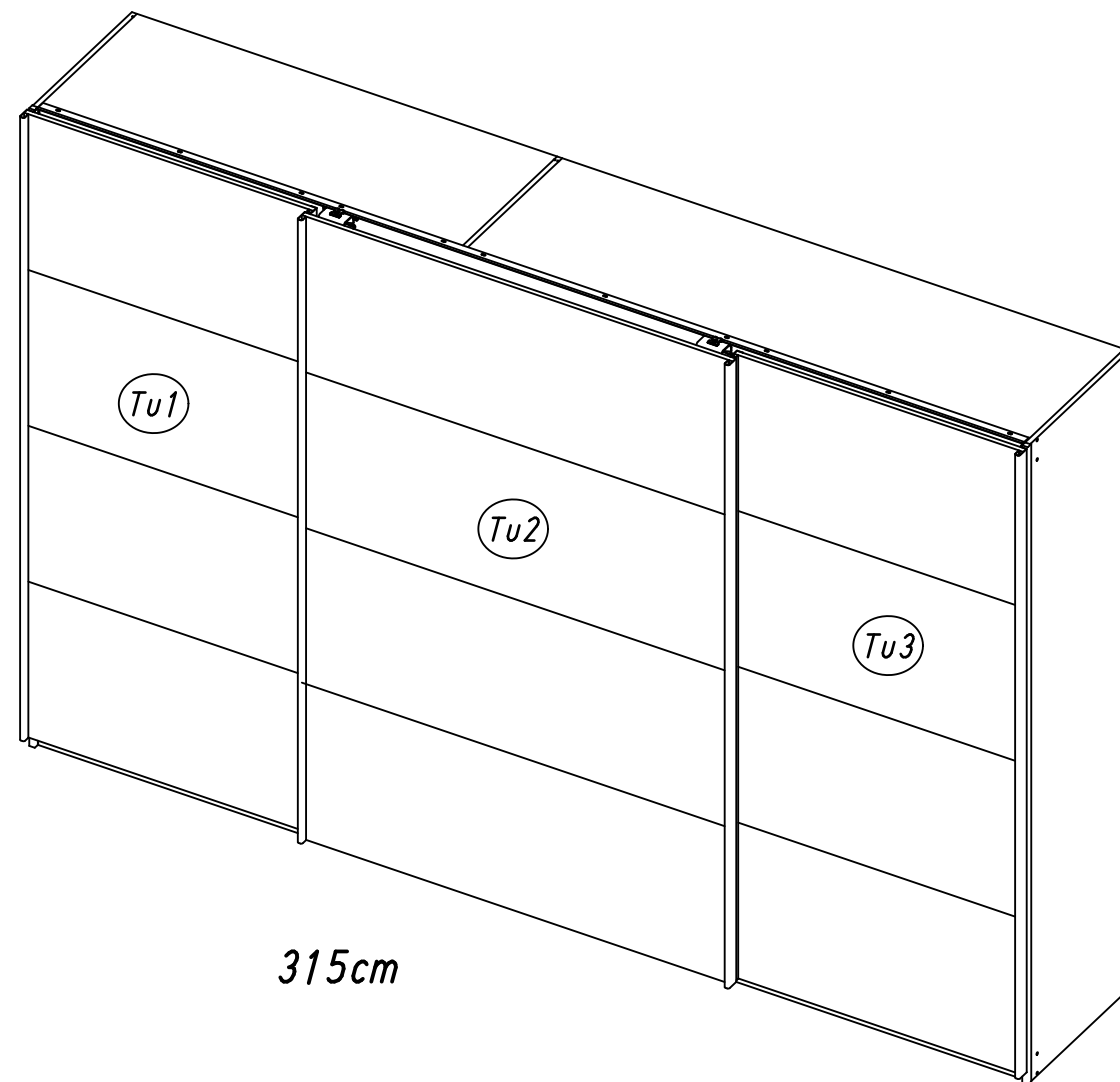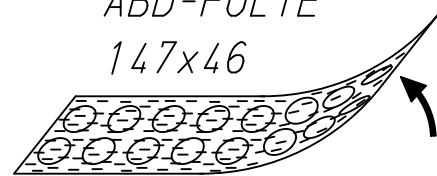


315cm


2.

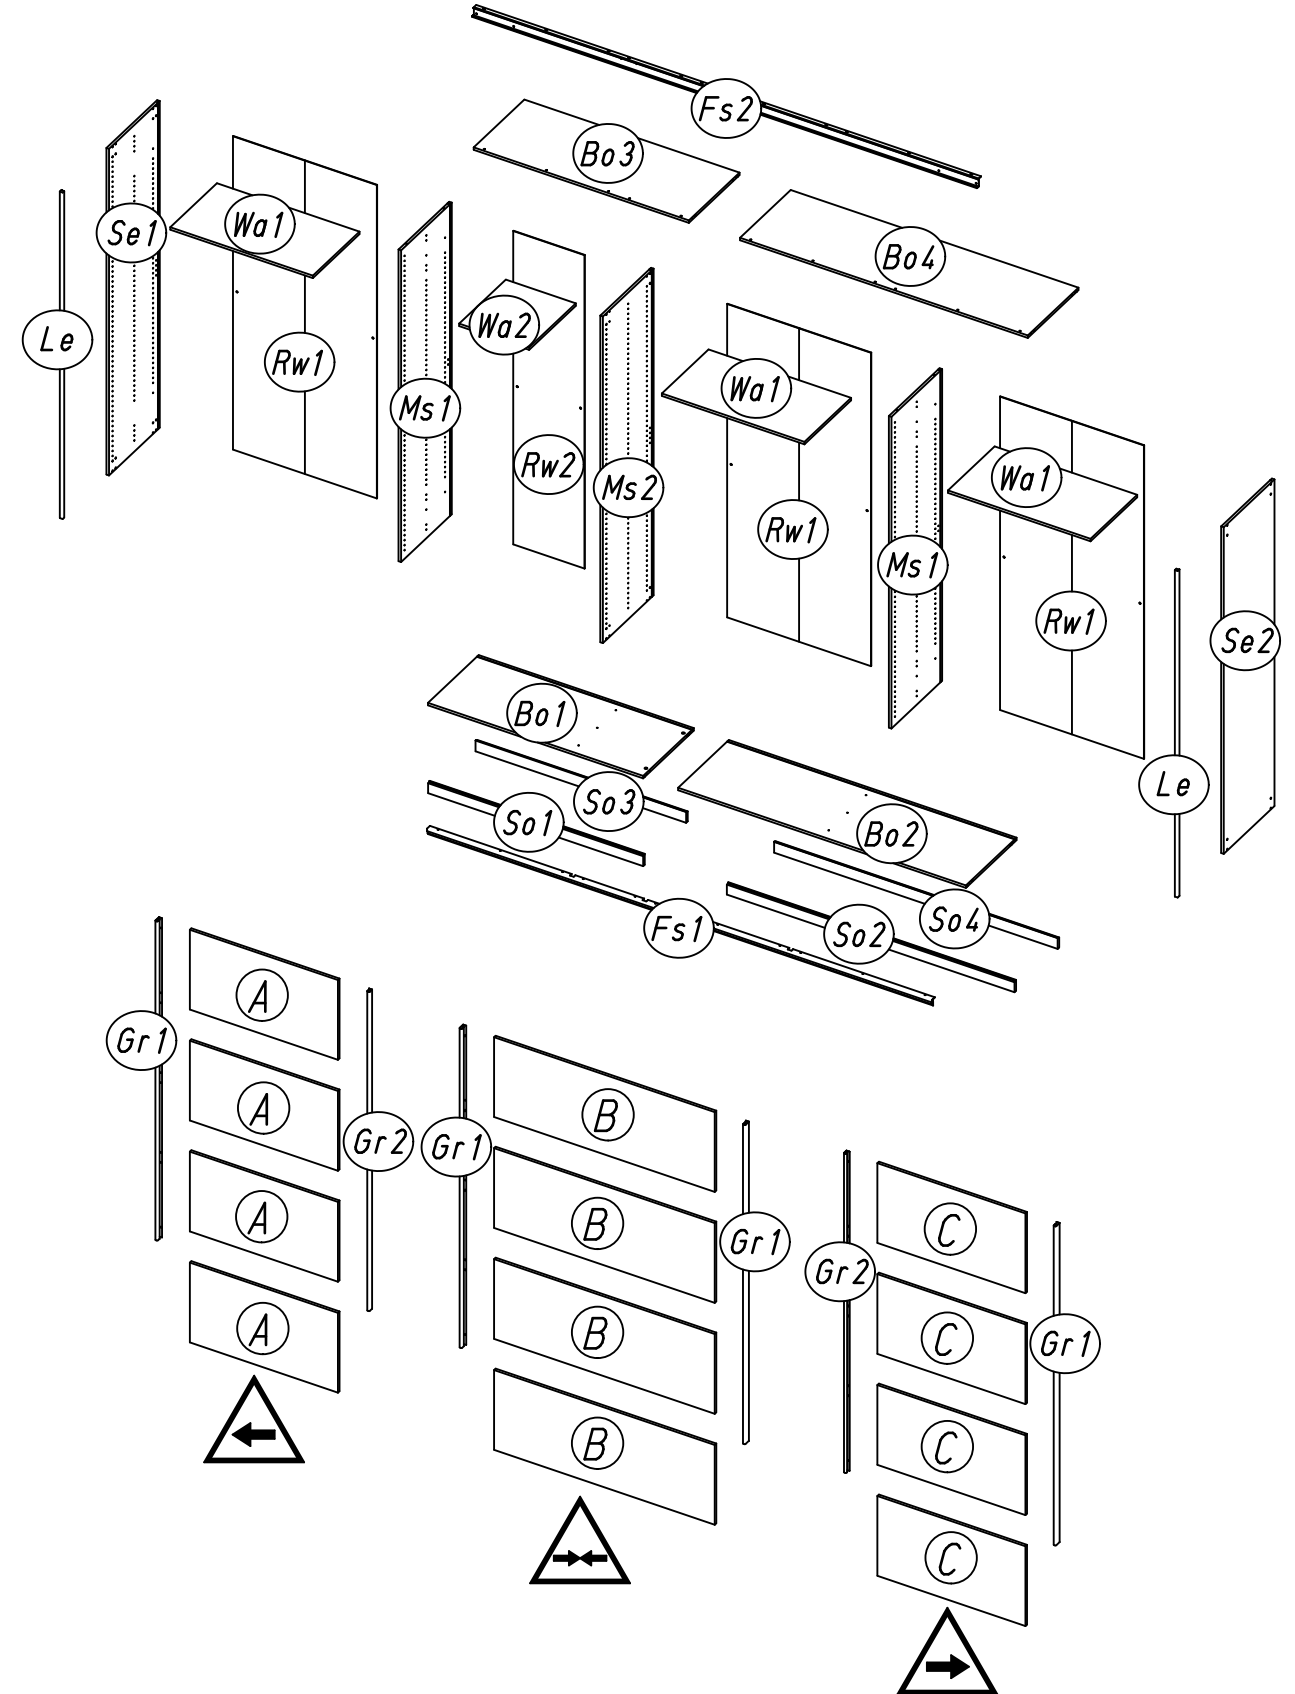




3.

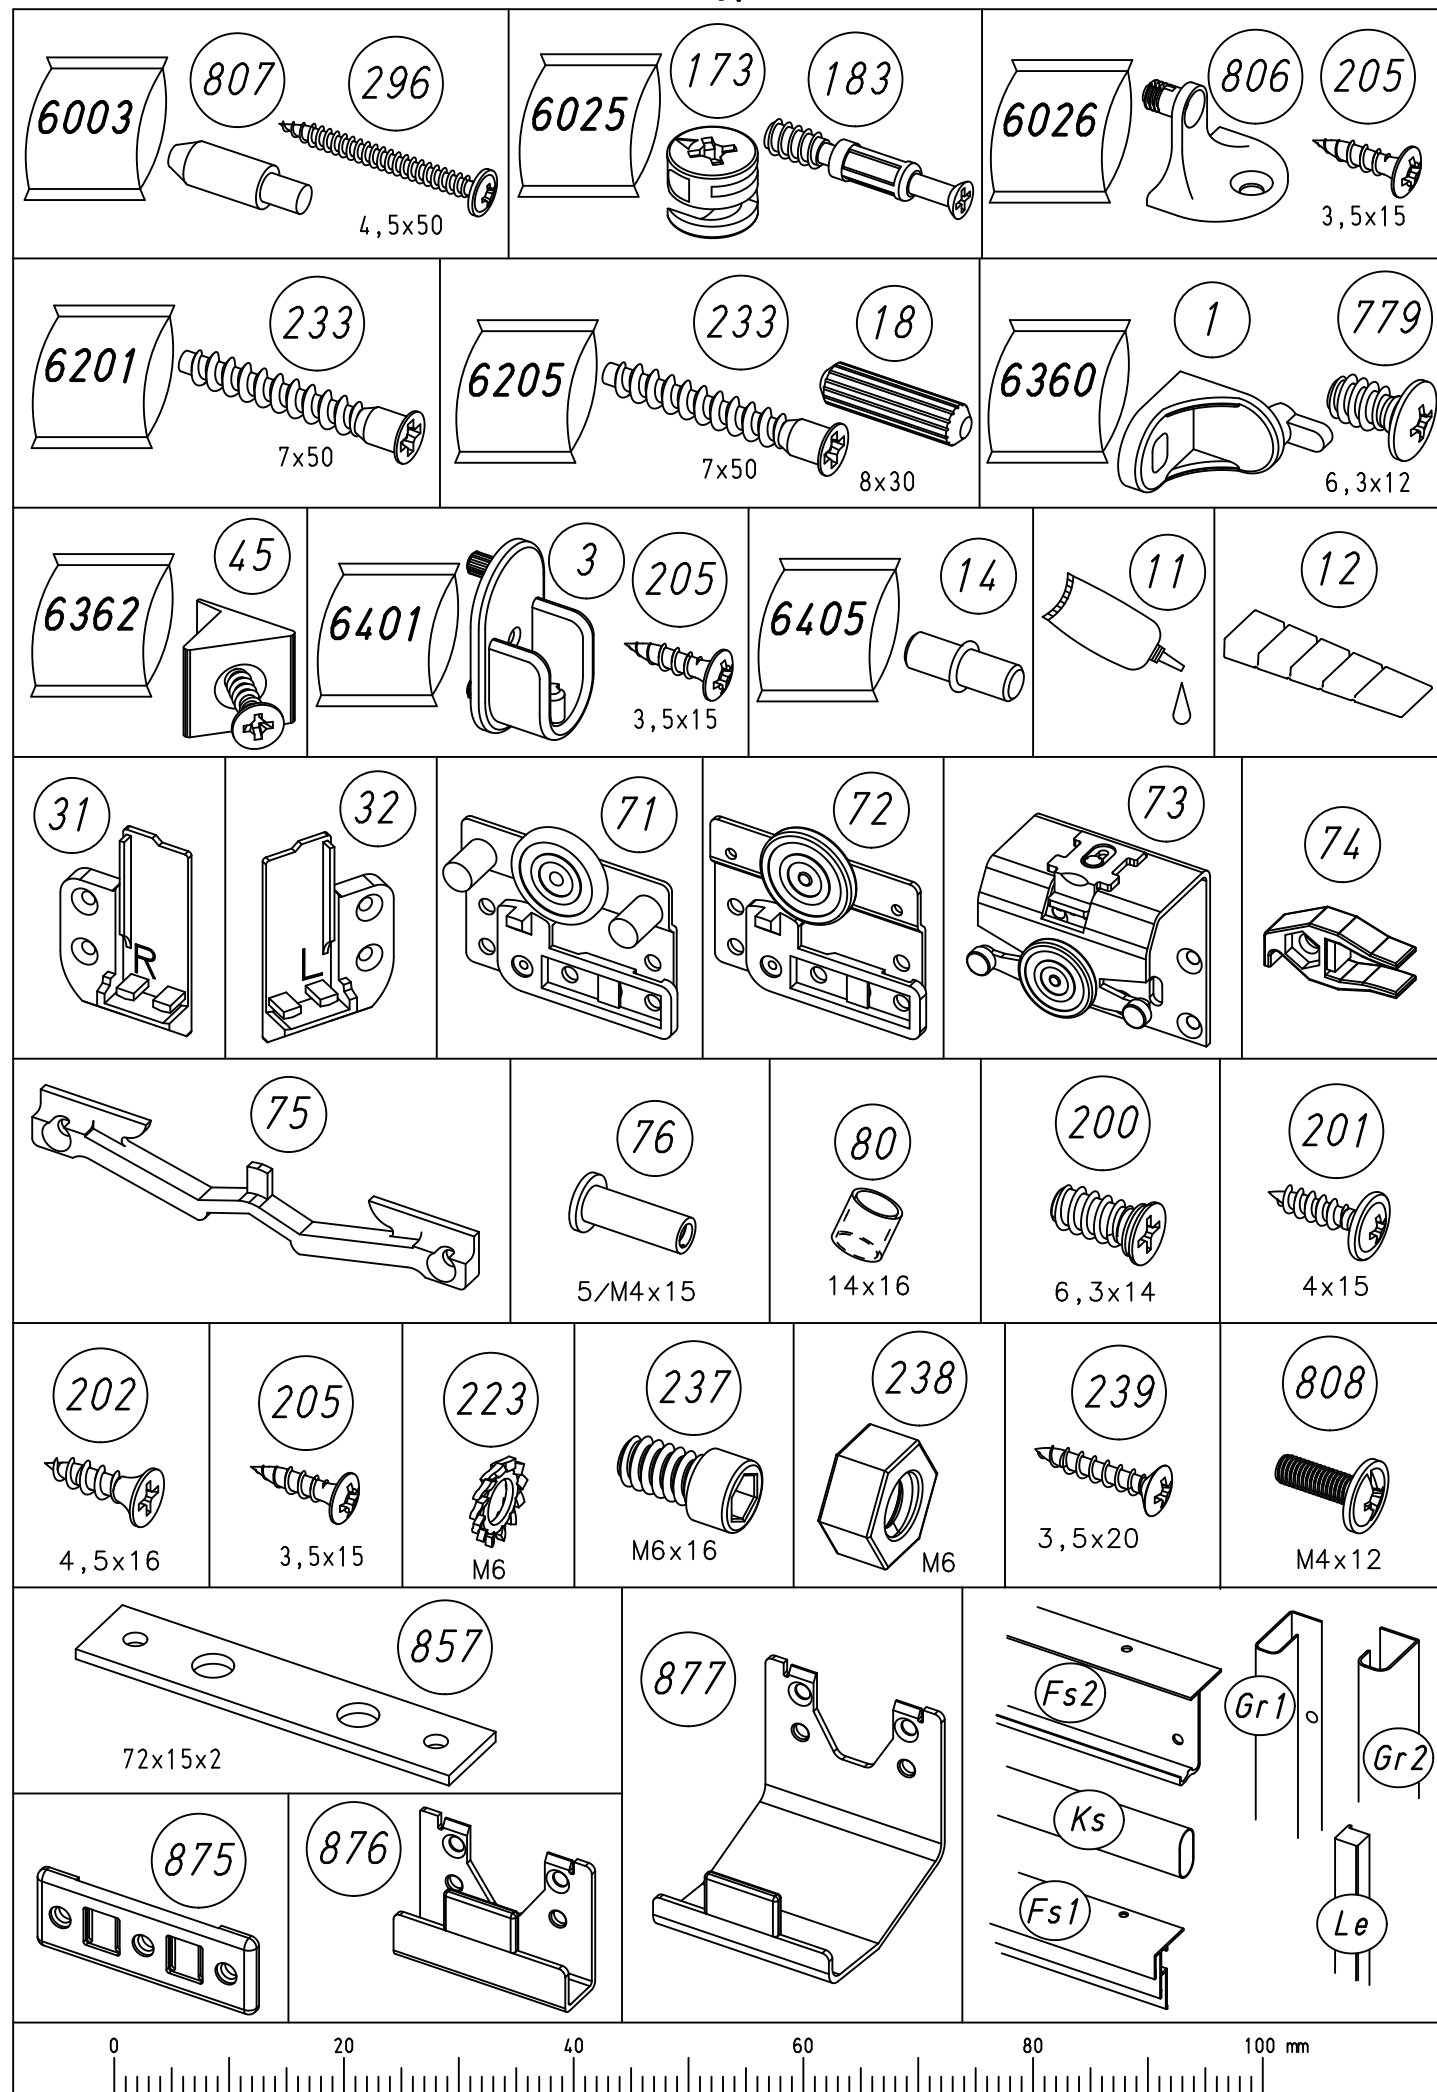

4.




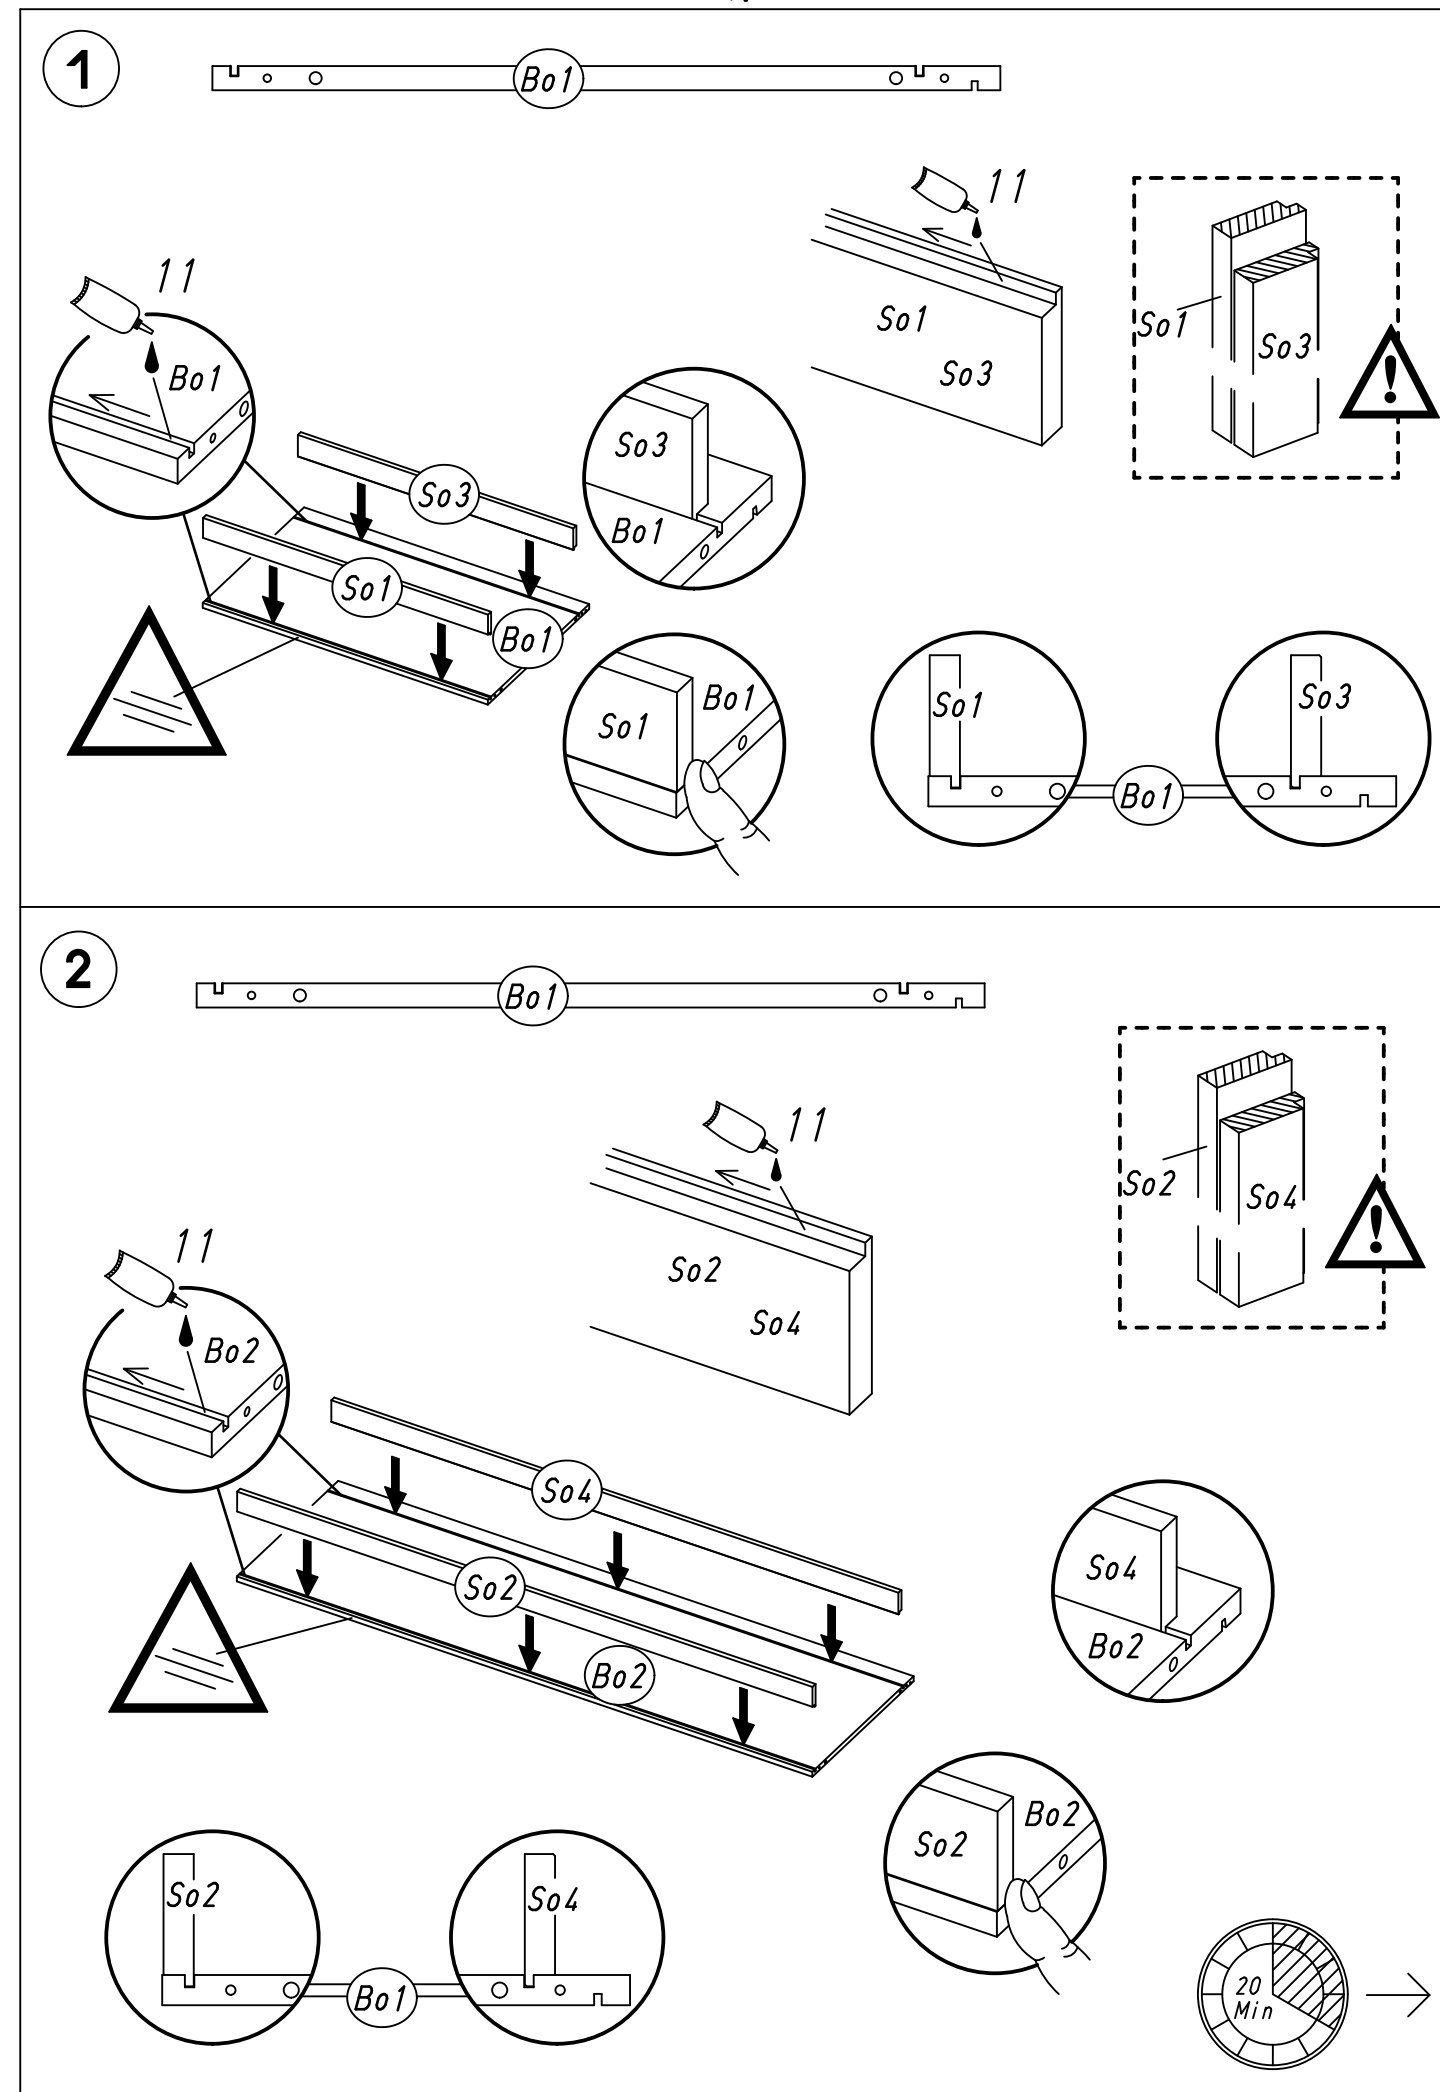


5.

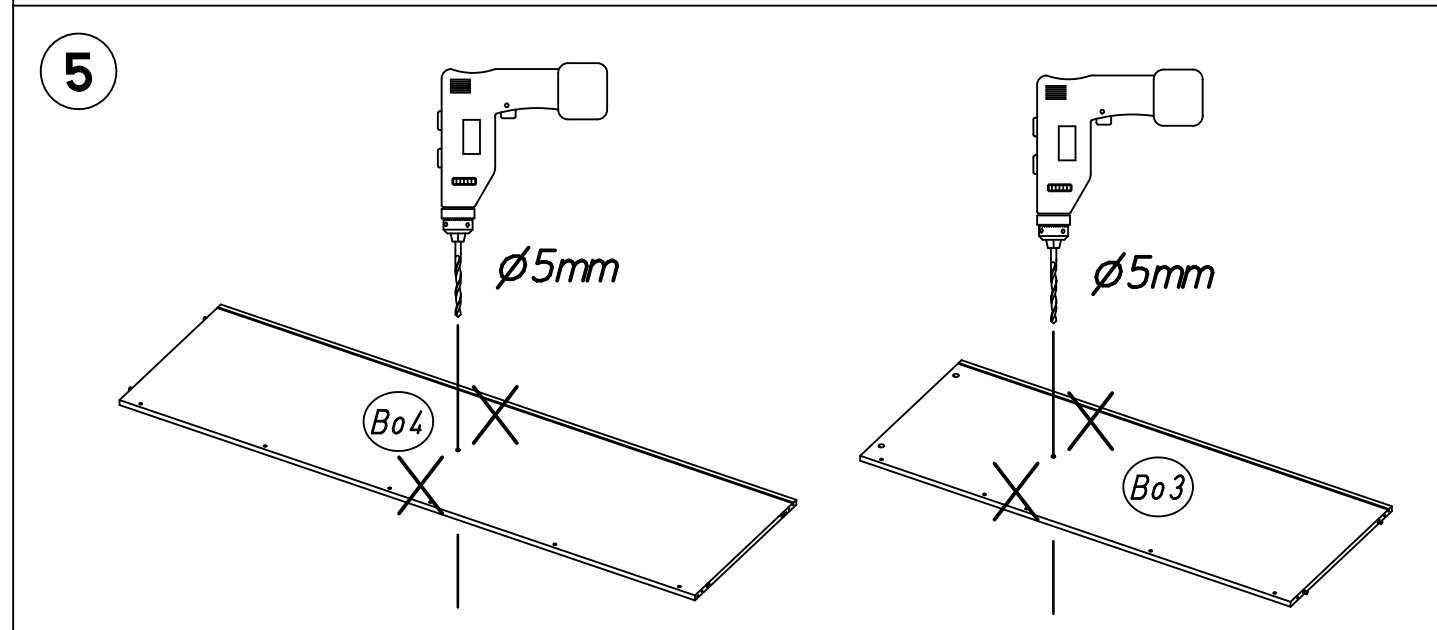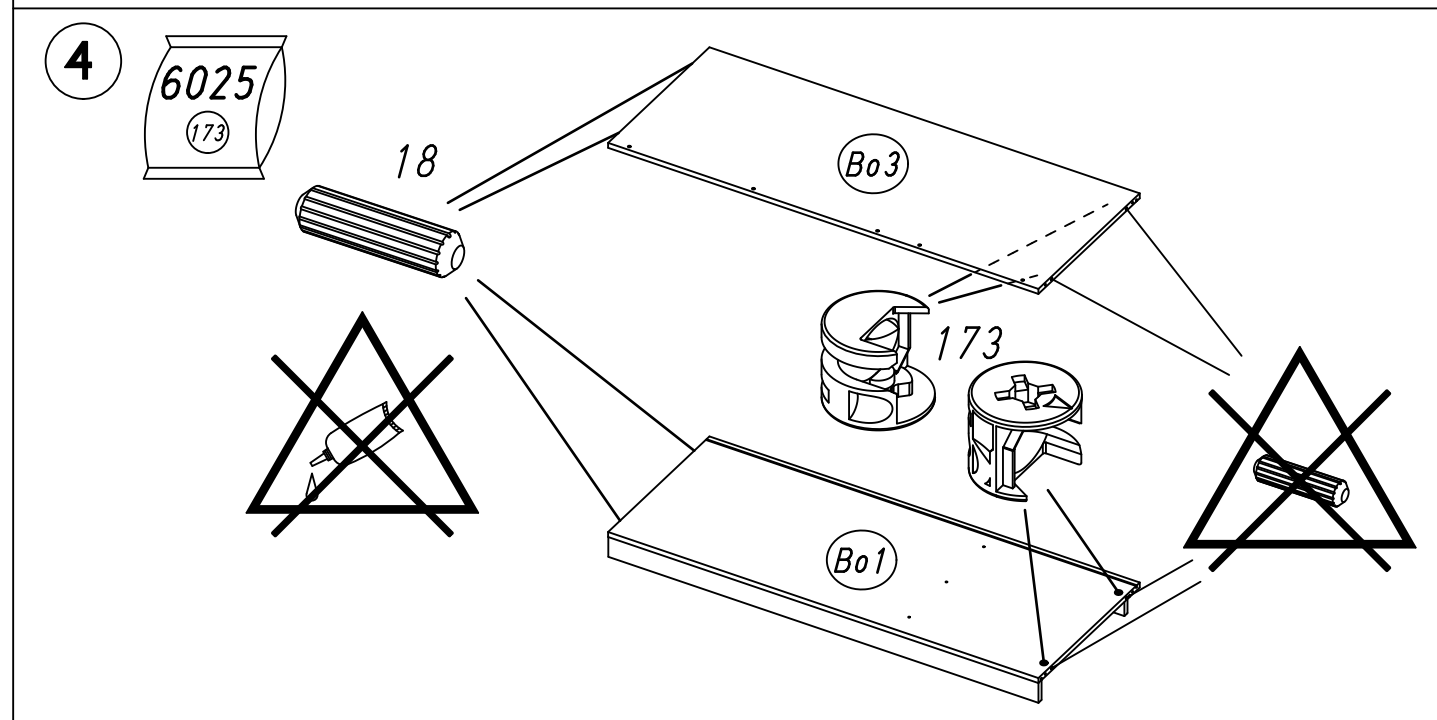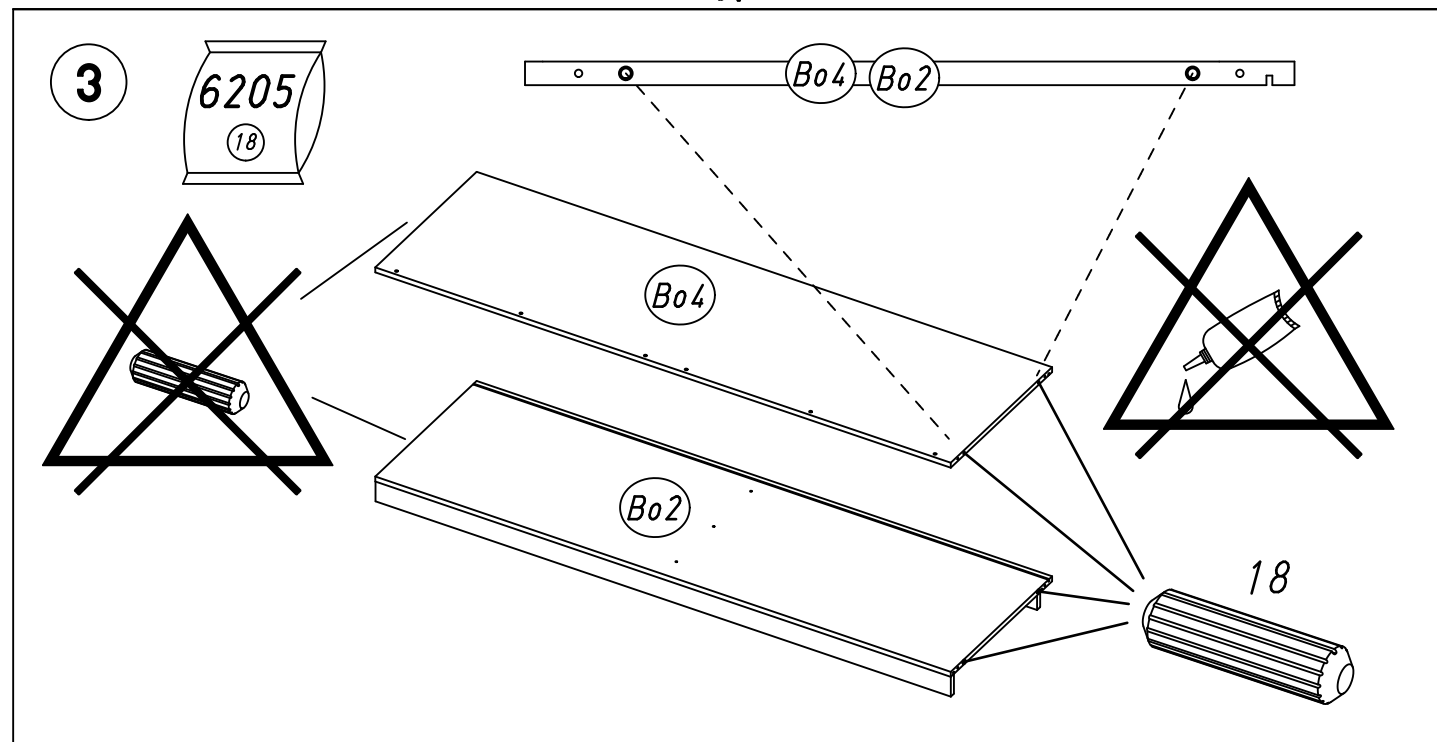



M1520

6.

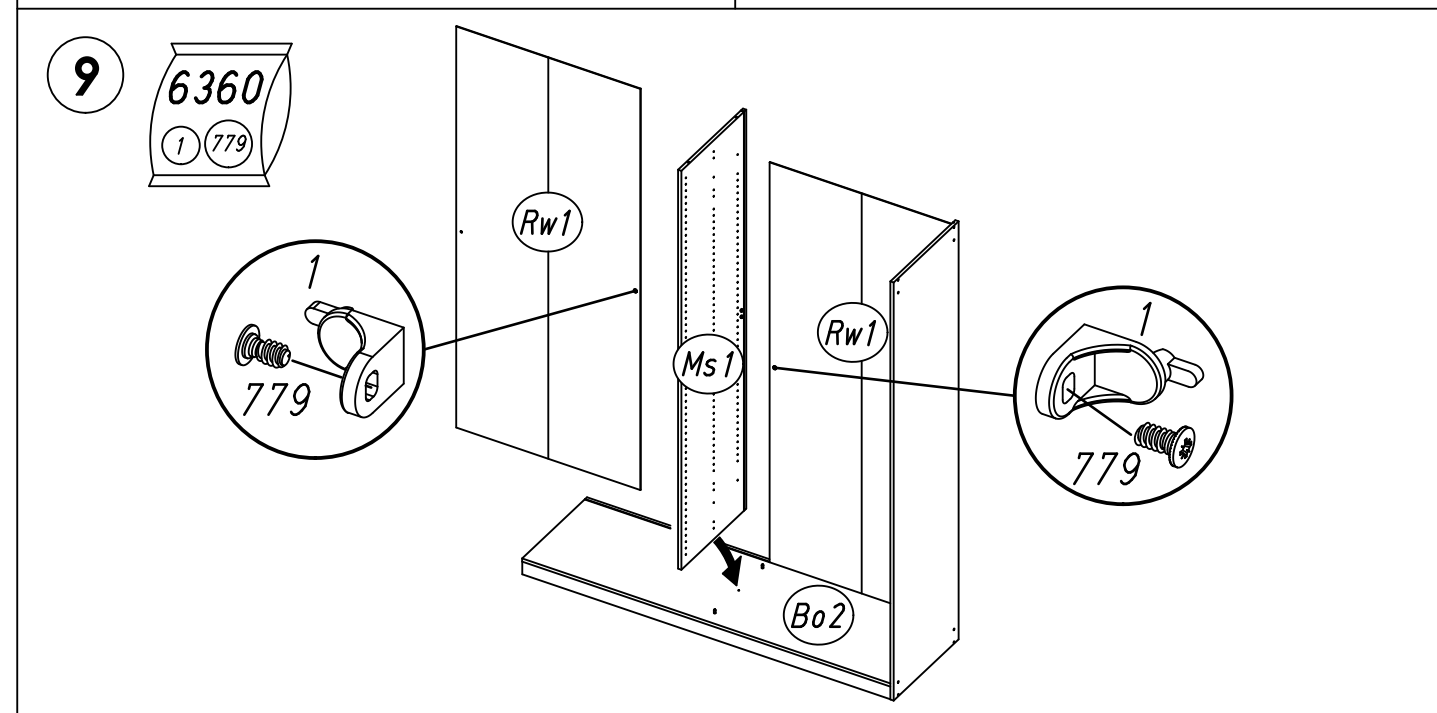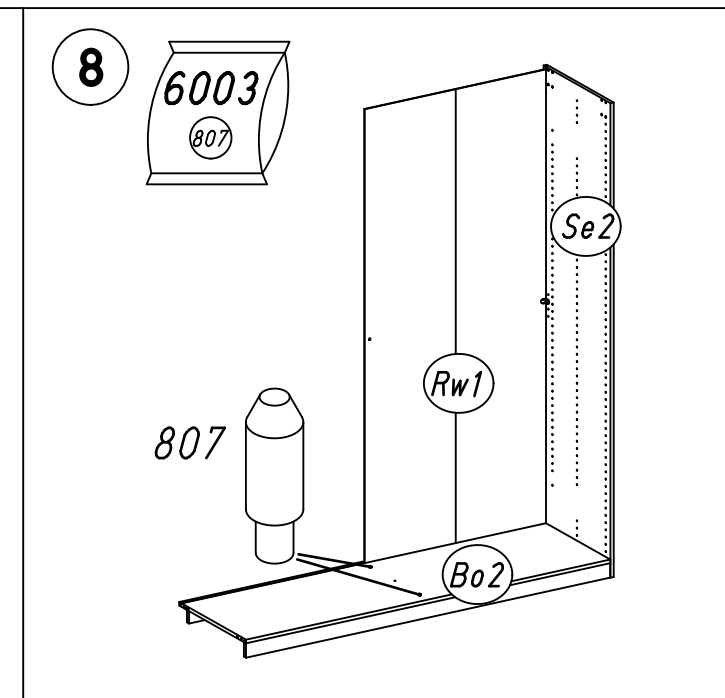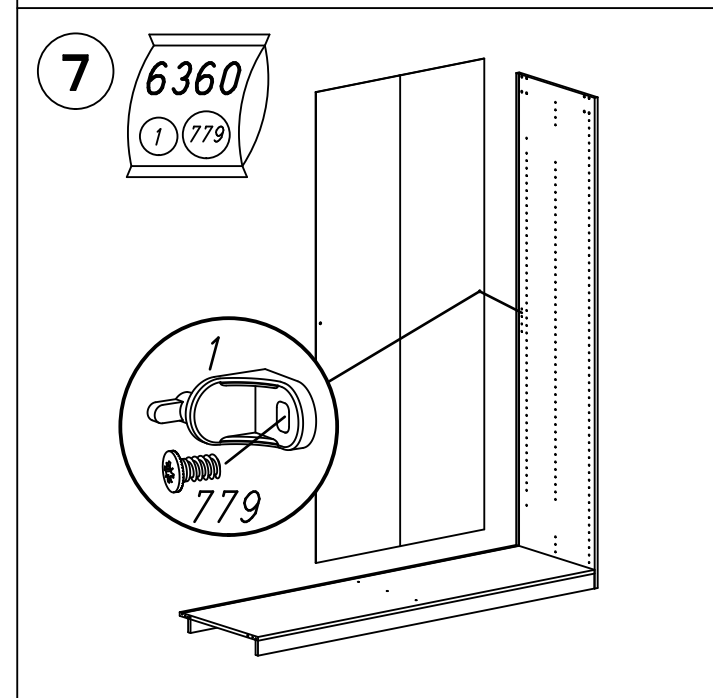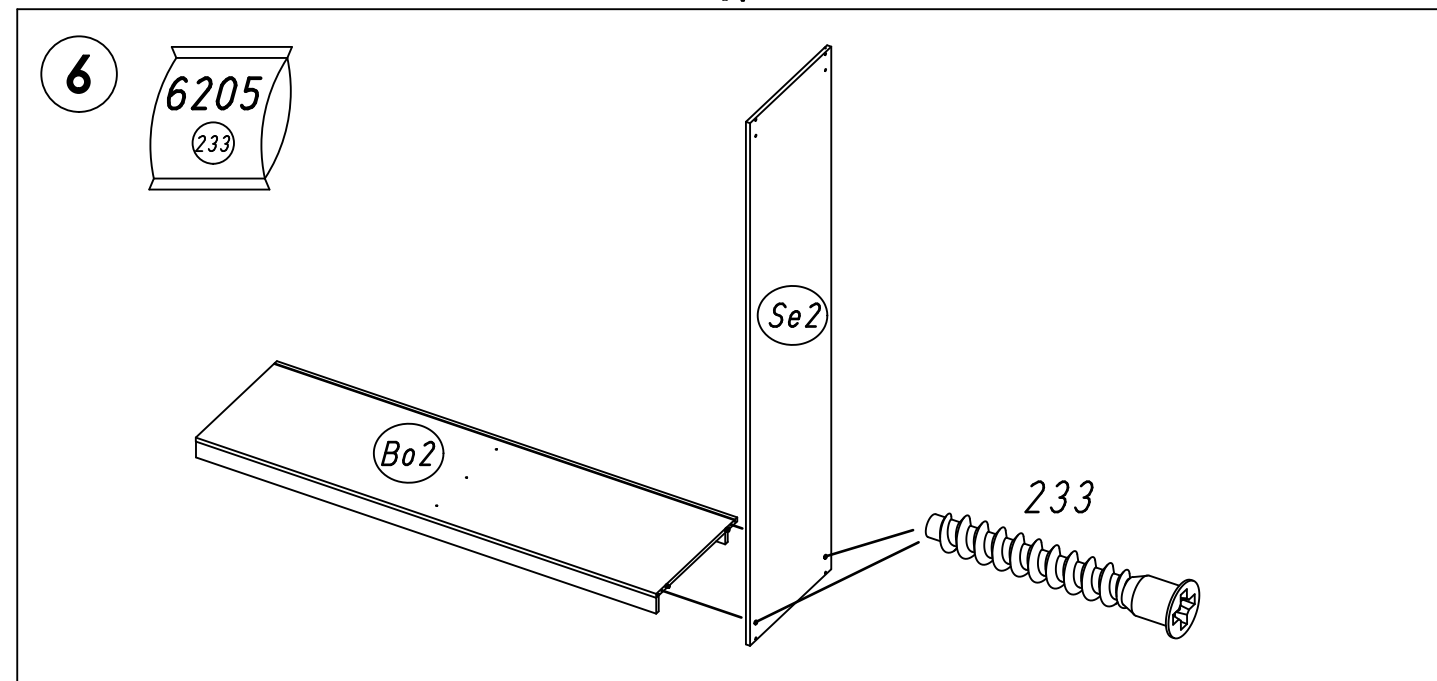





M1520

7.

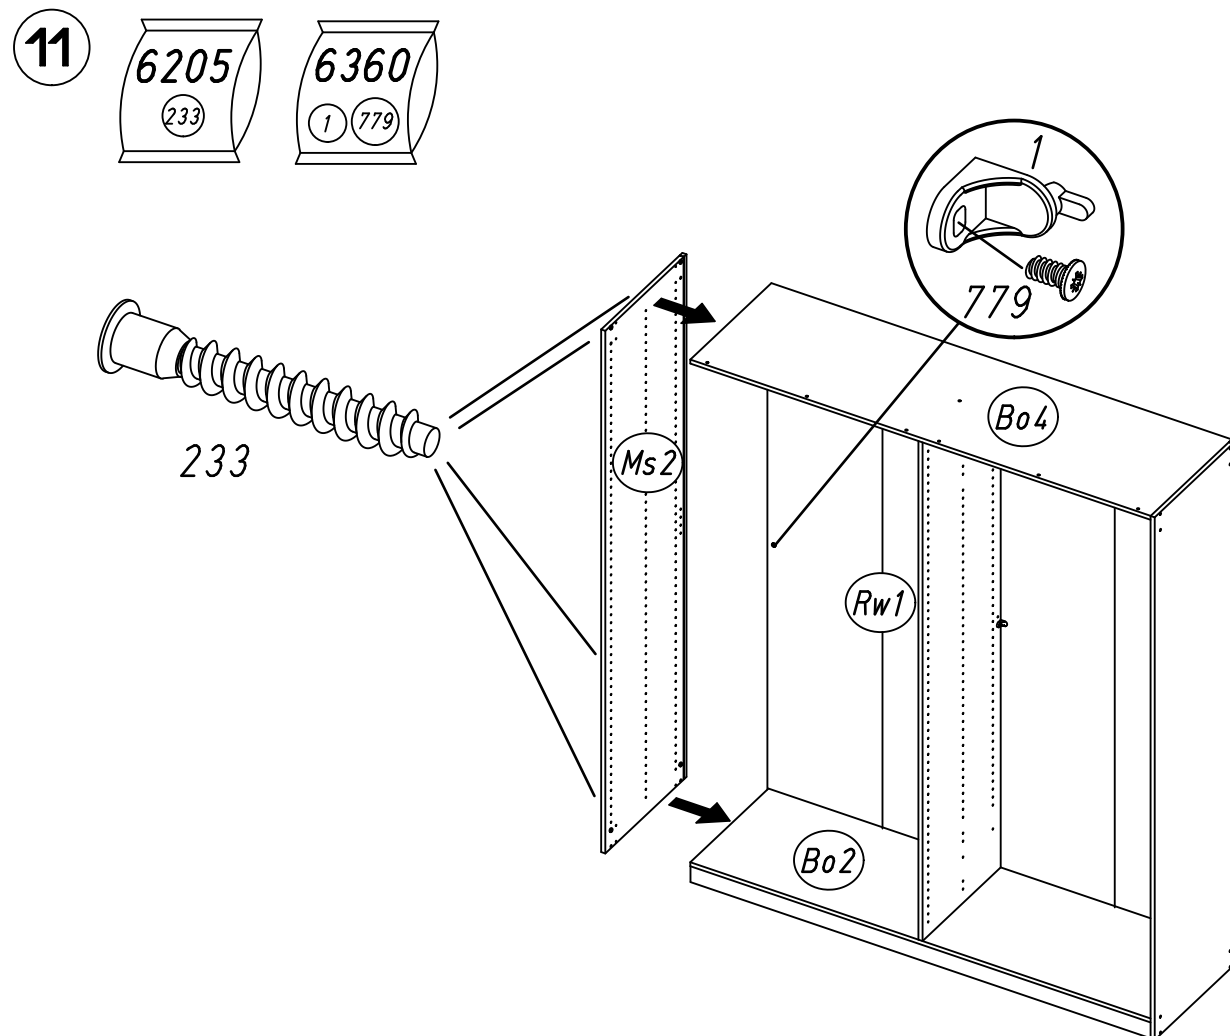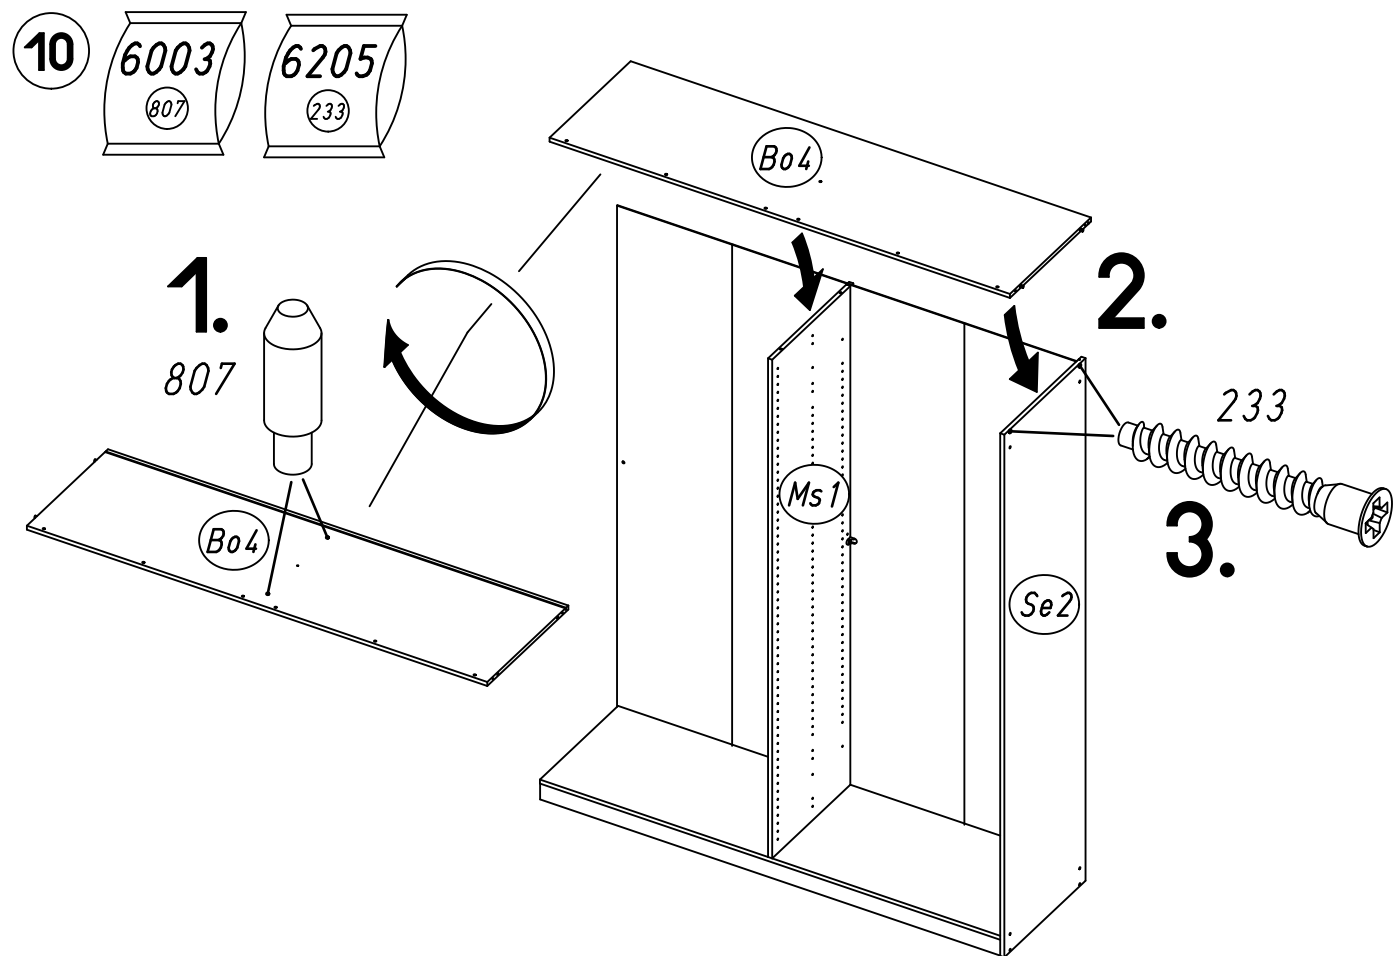






M1520

8.

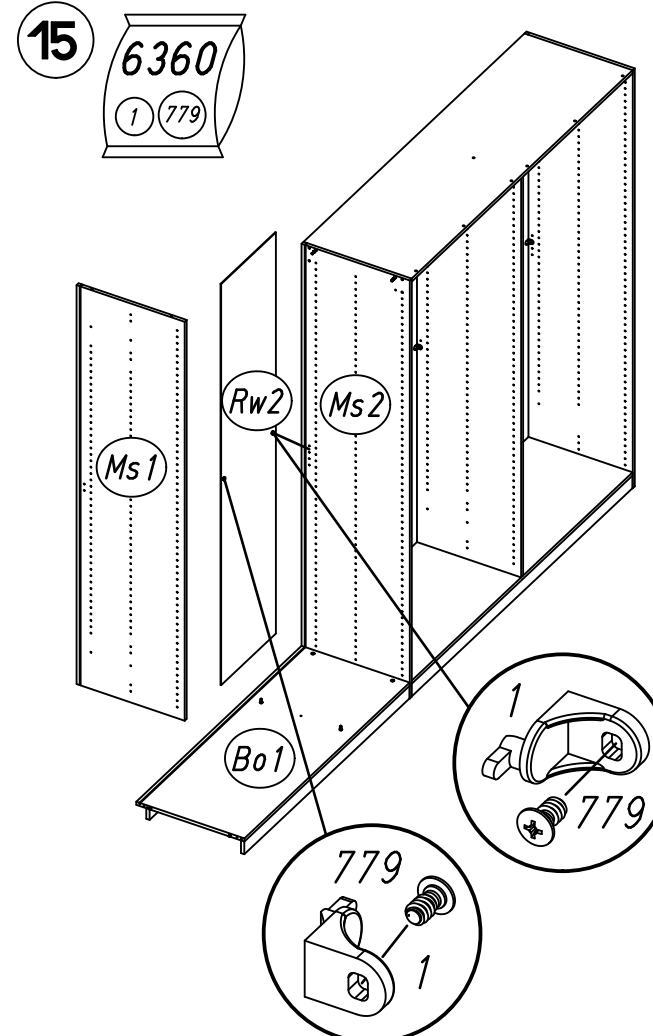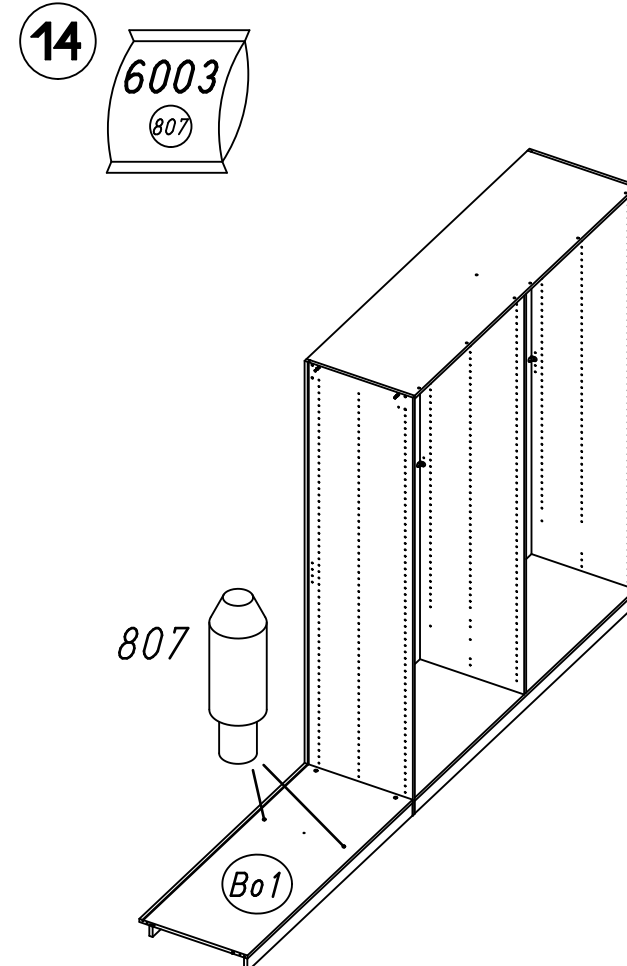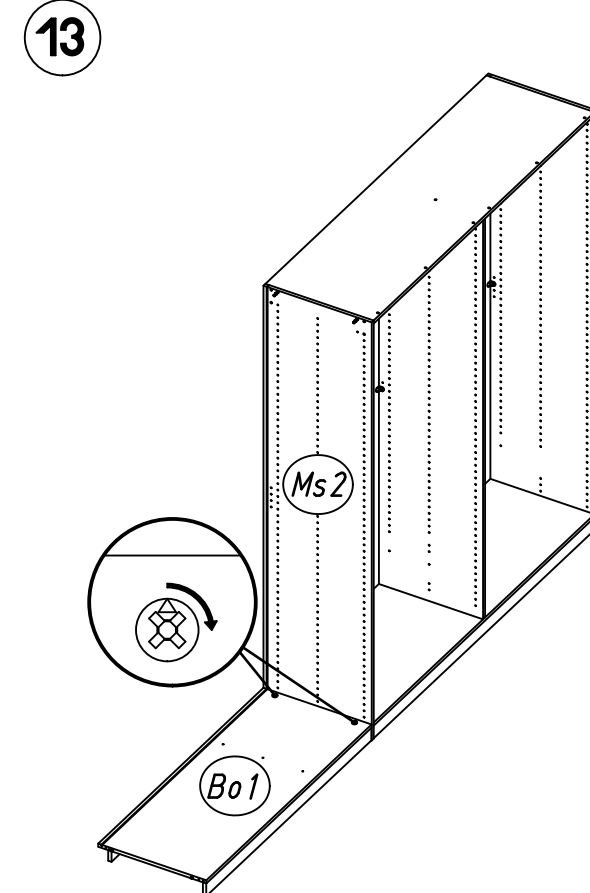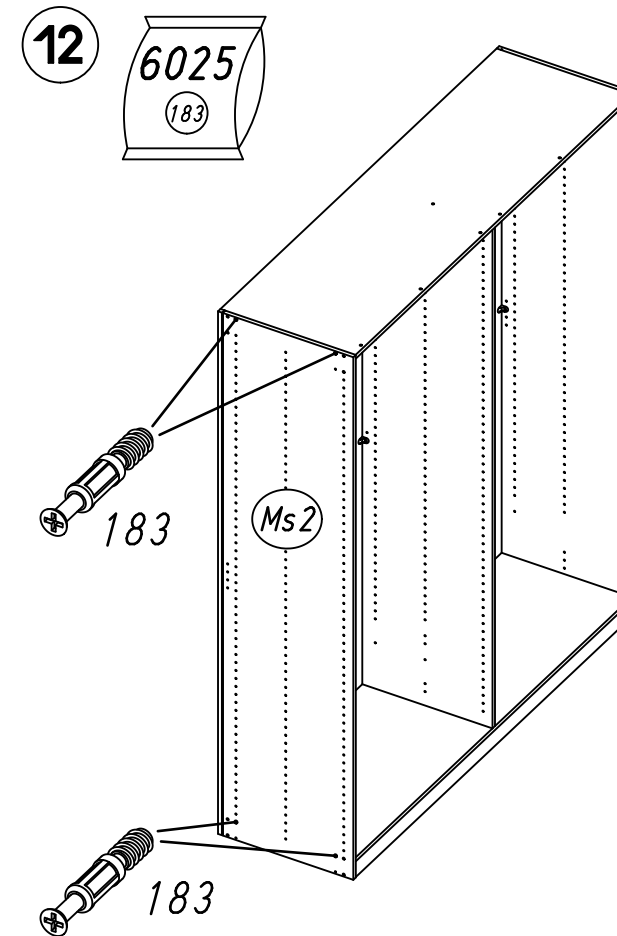




M1520

9.

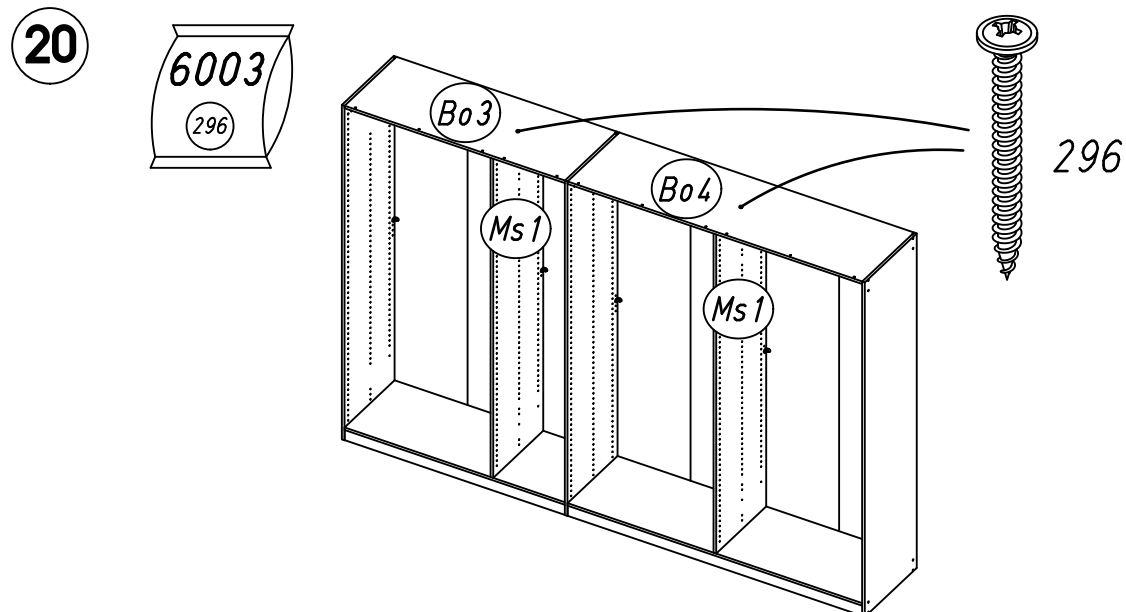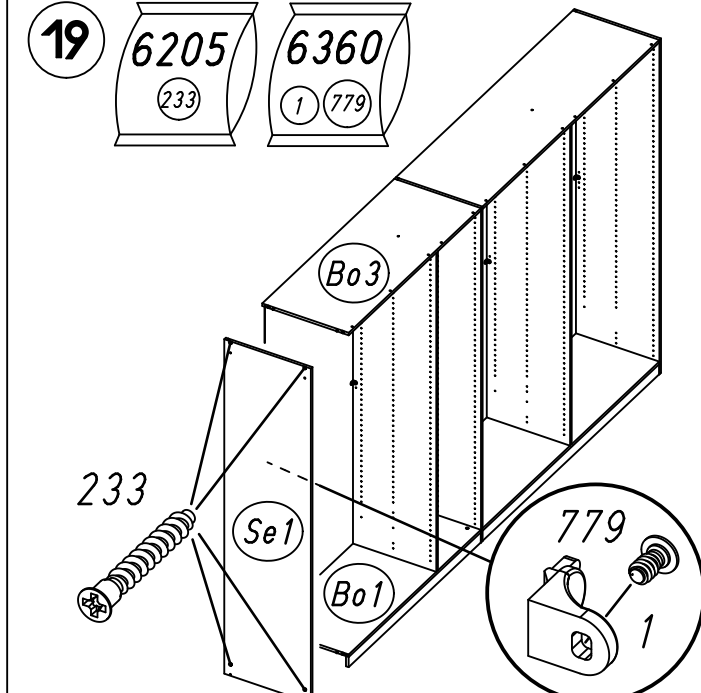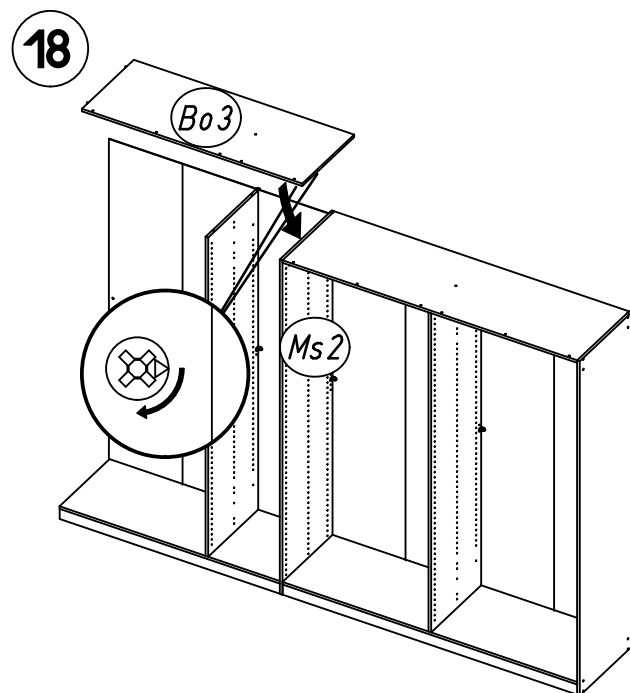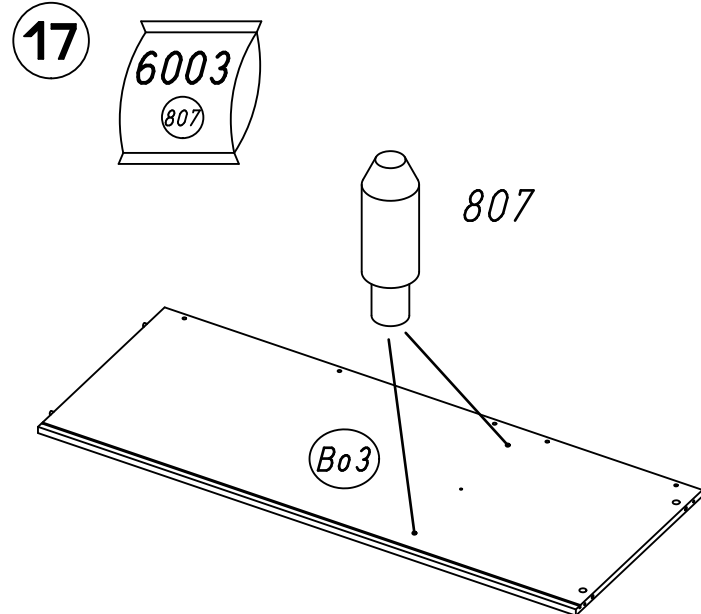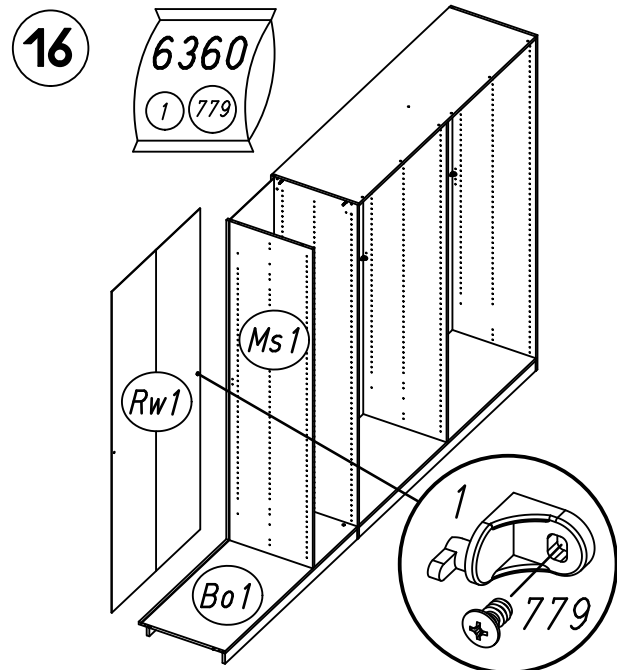



M1520

10.

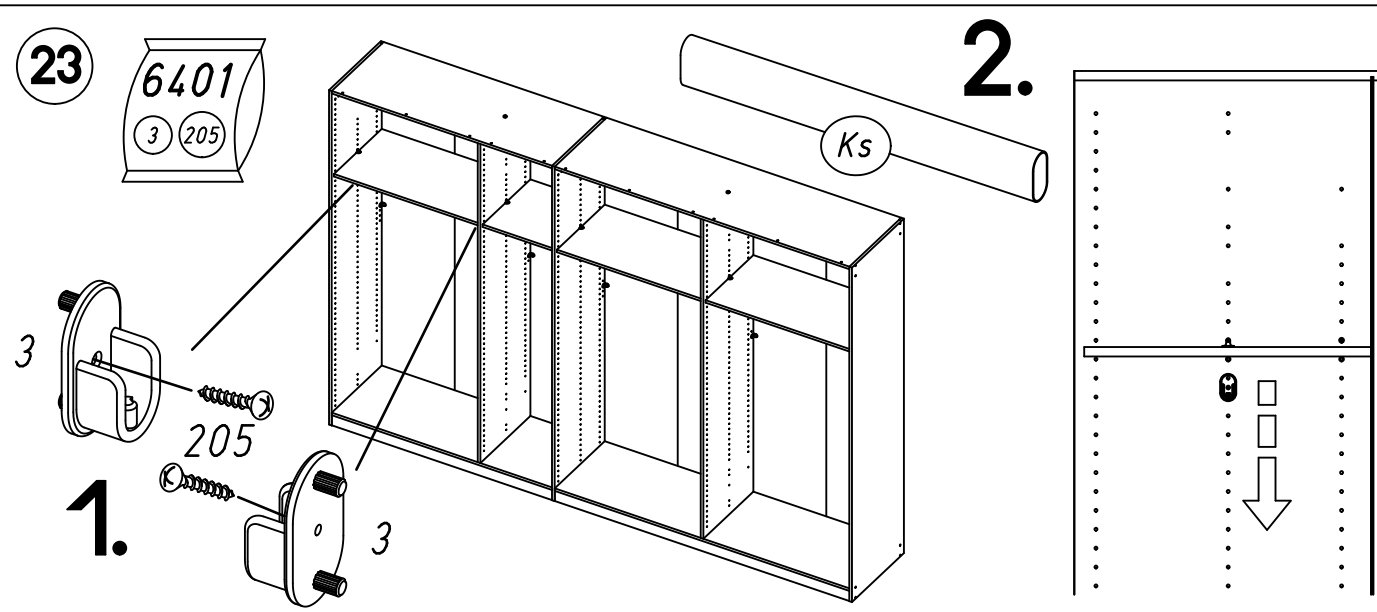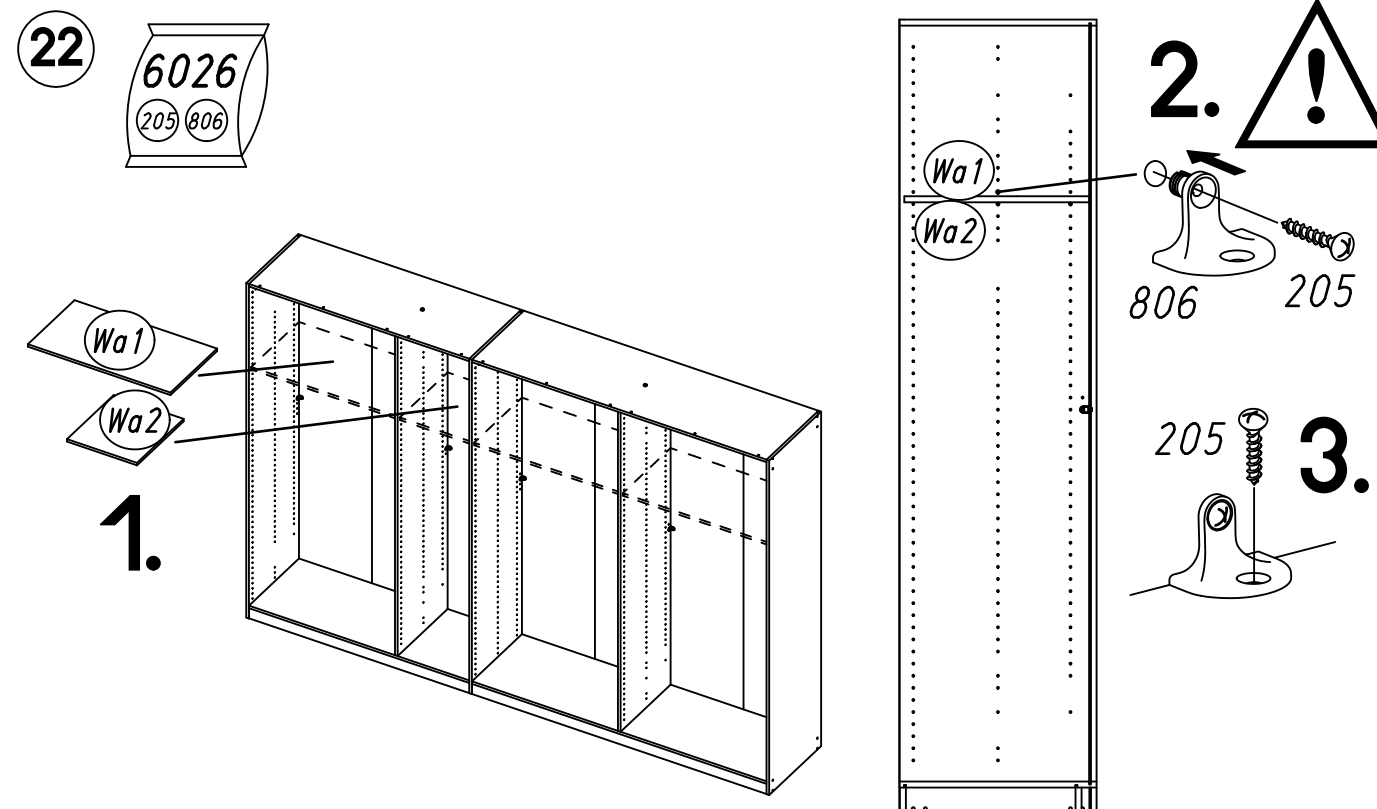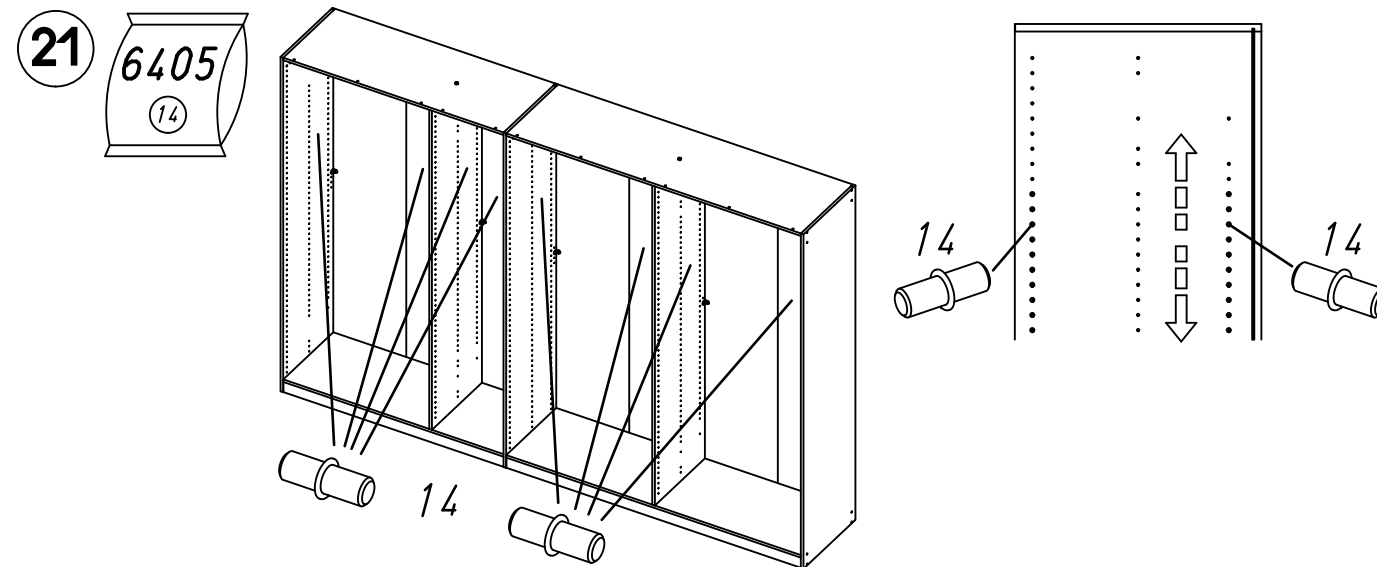




M1520

11.




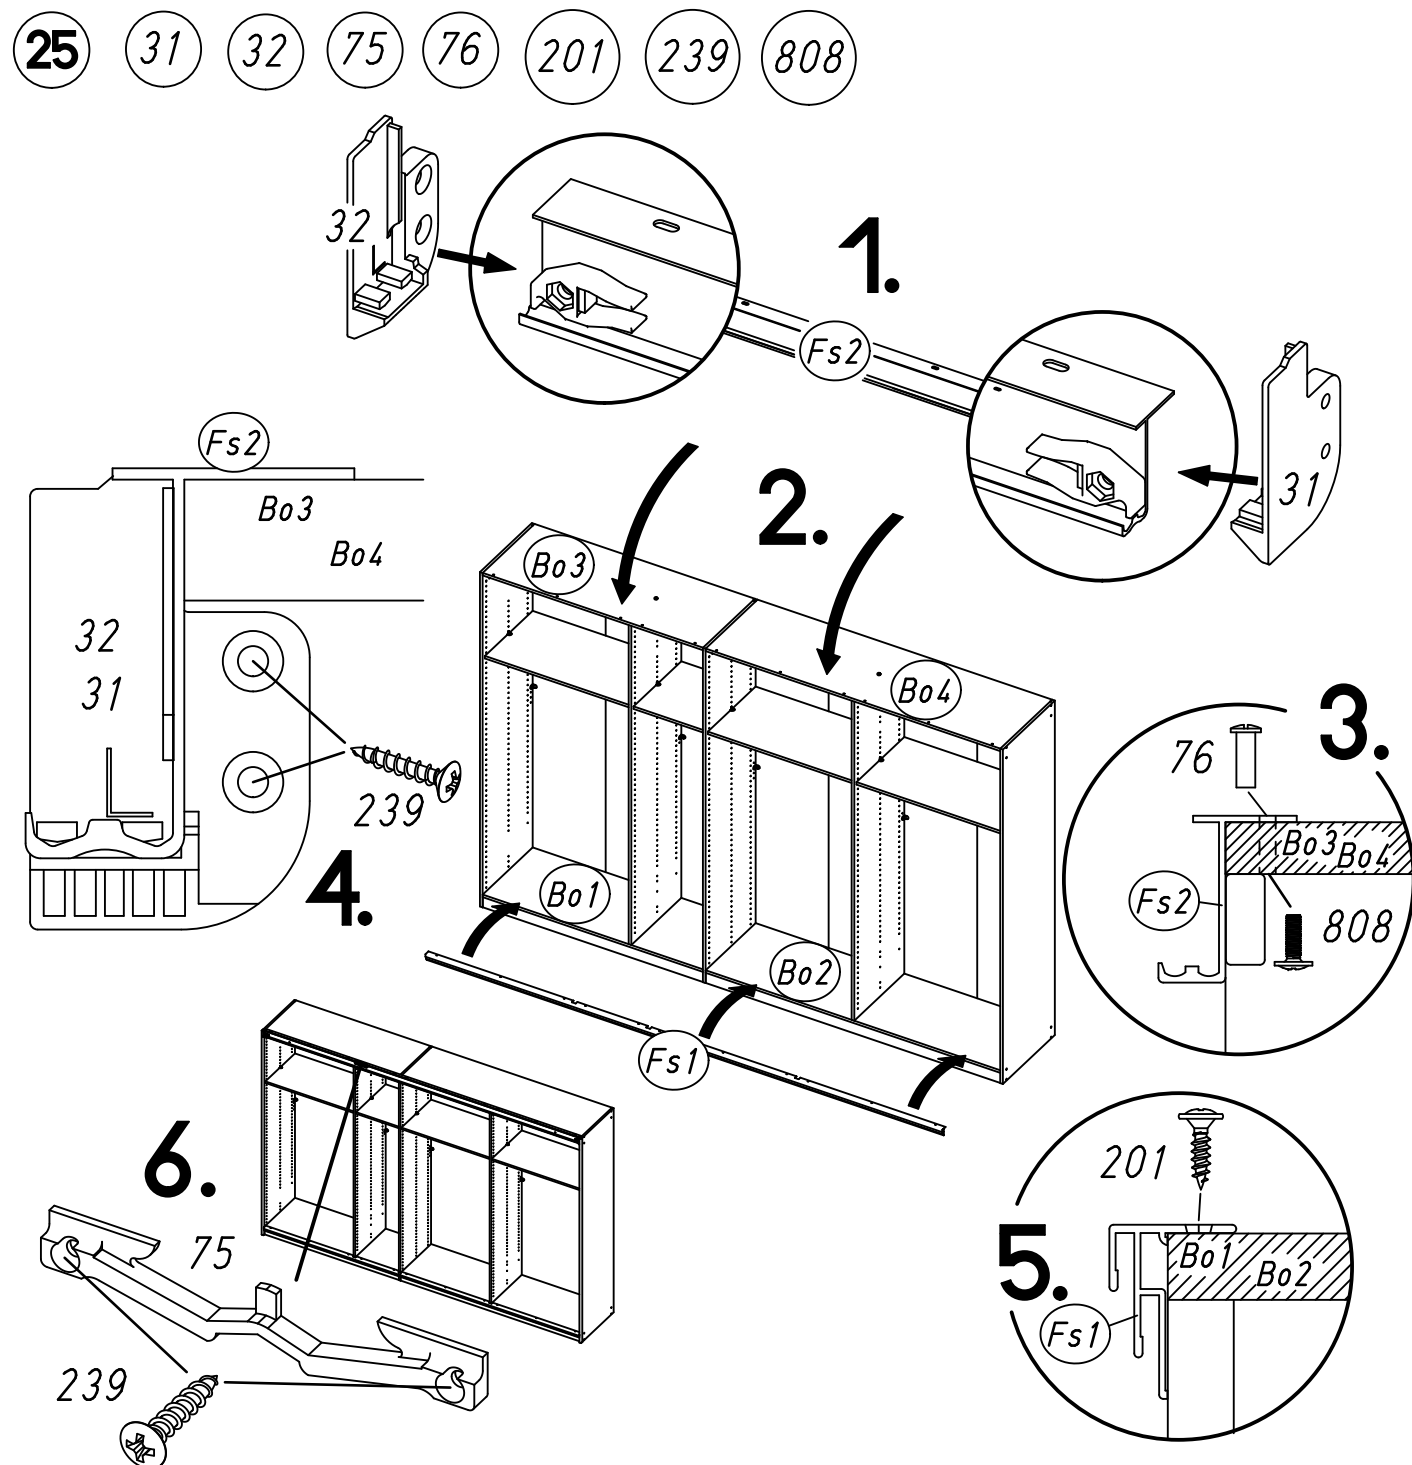
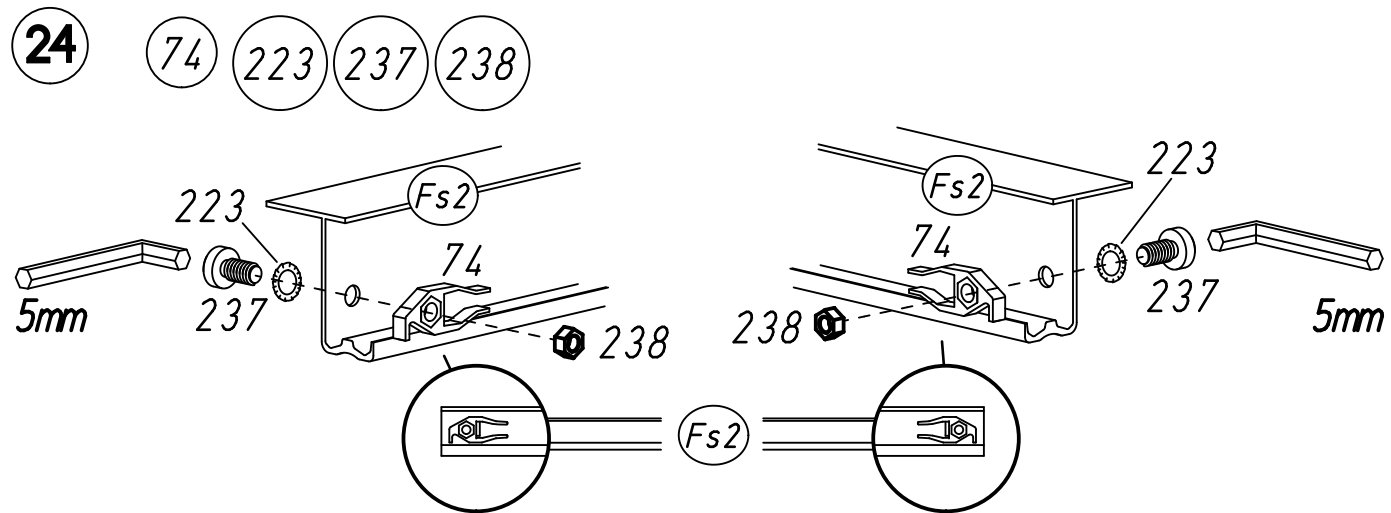


M1520



12.

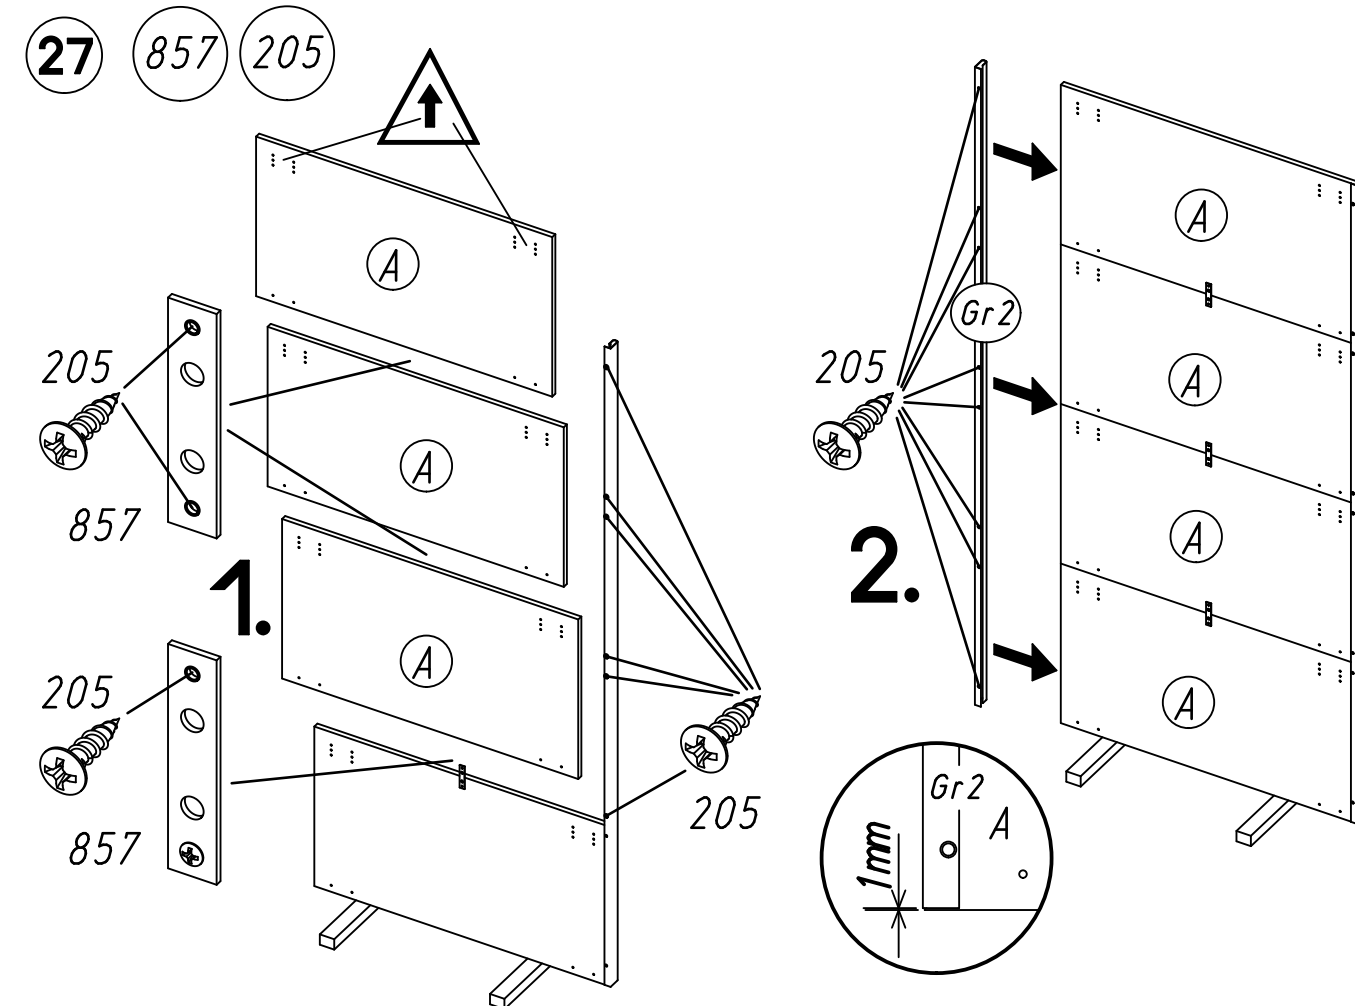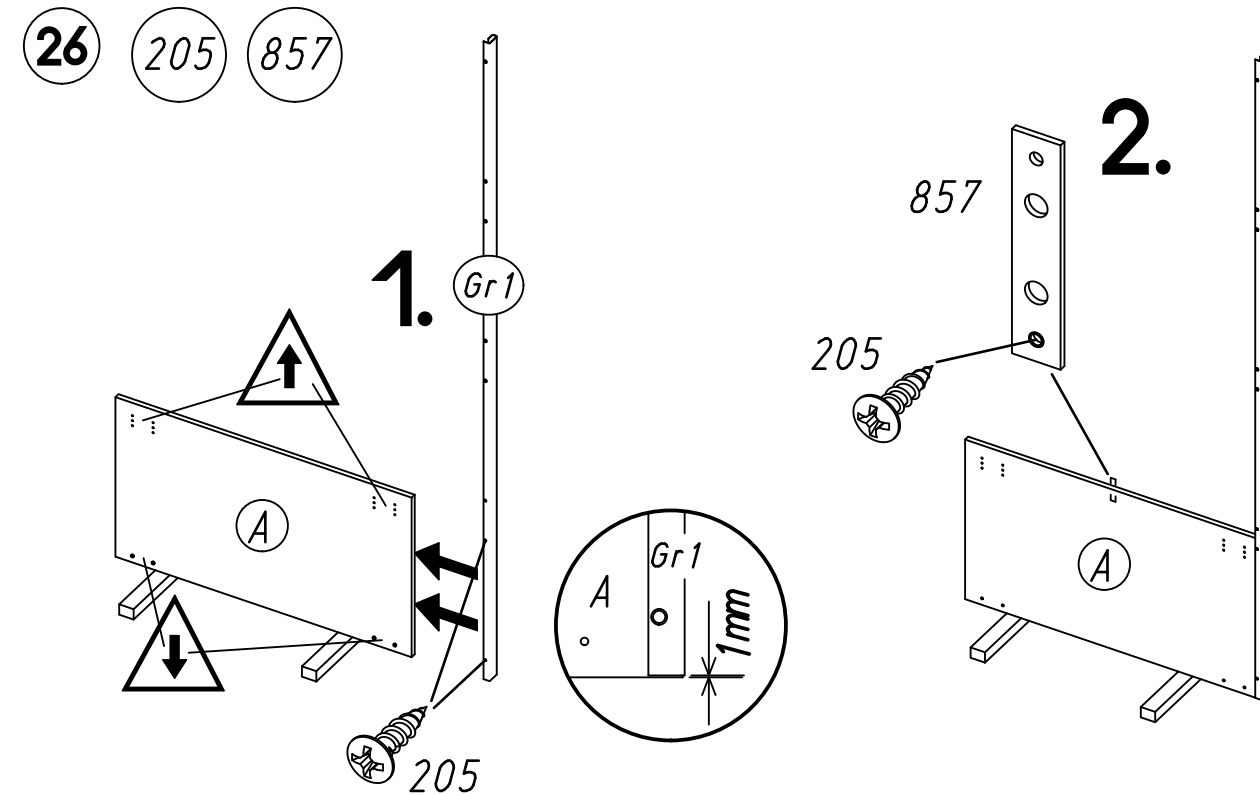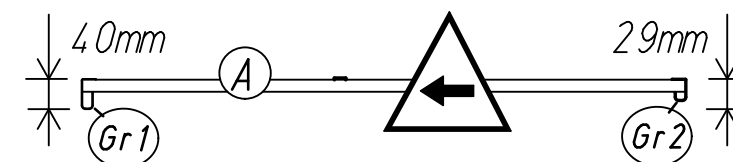

M1520

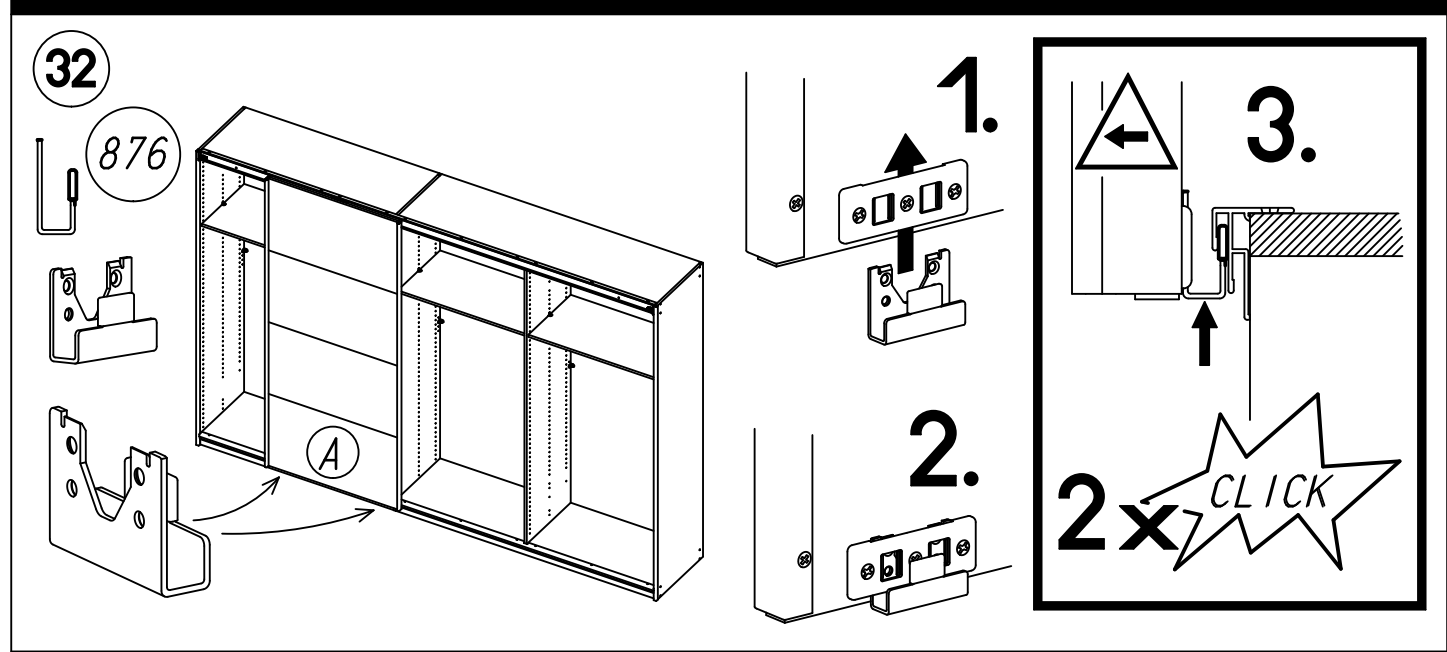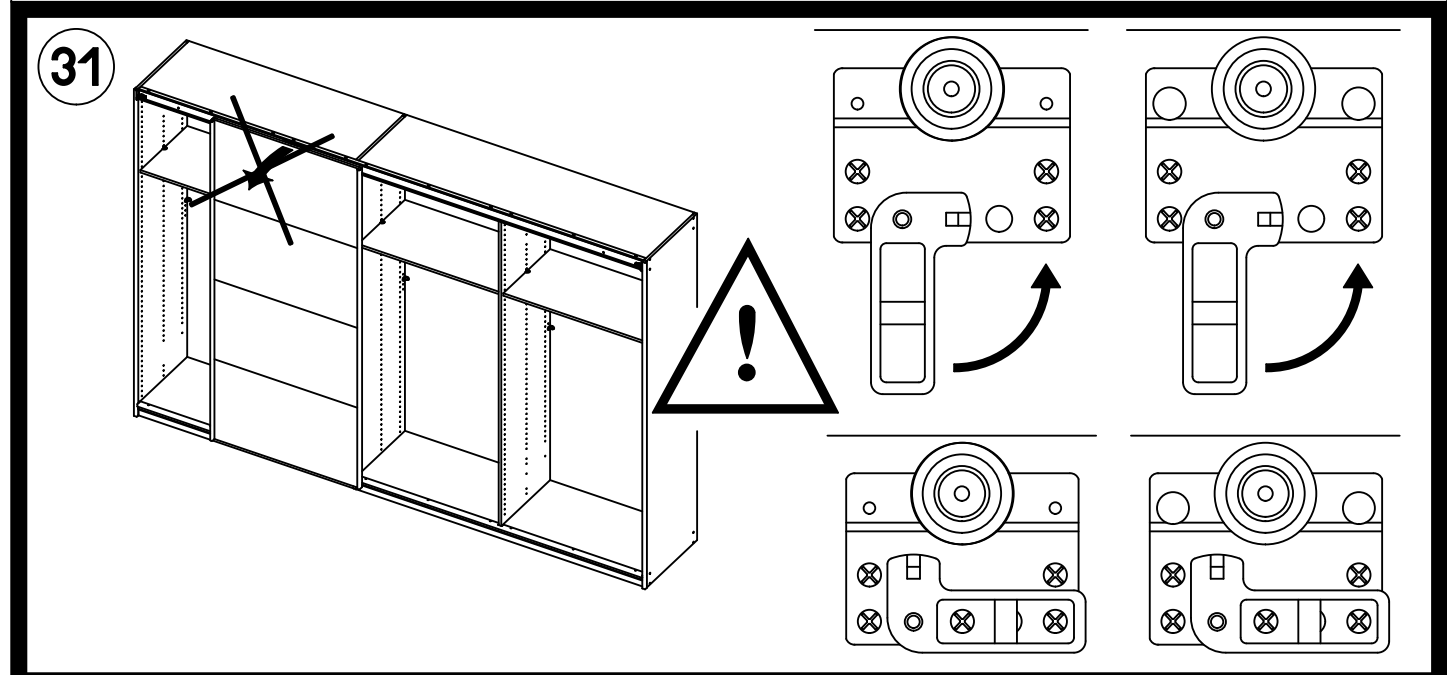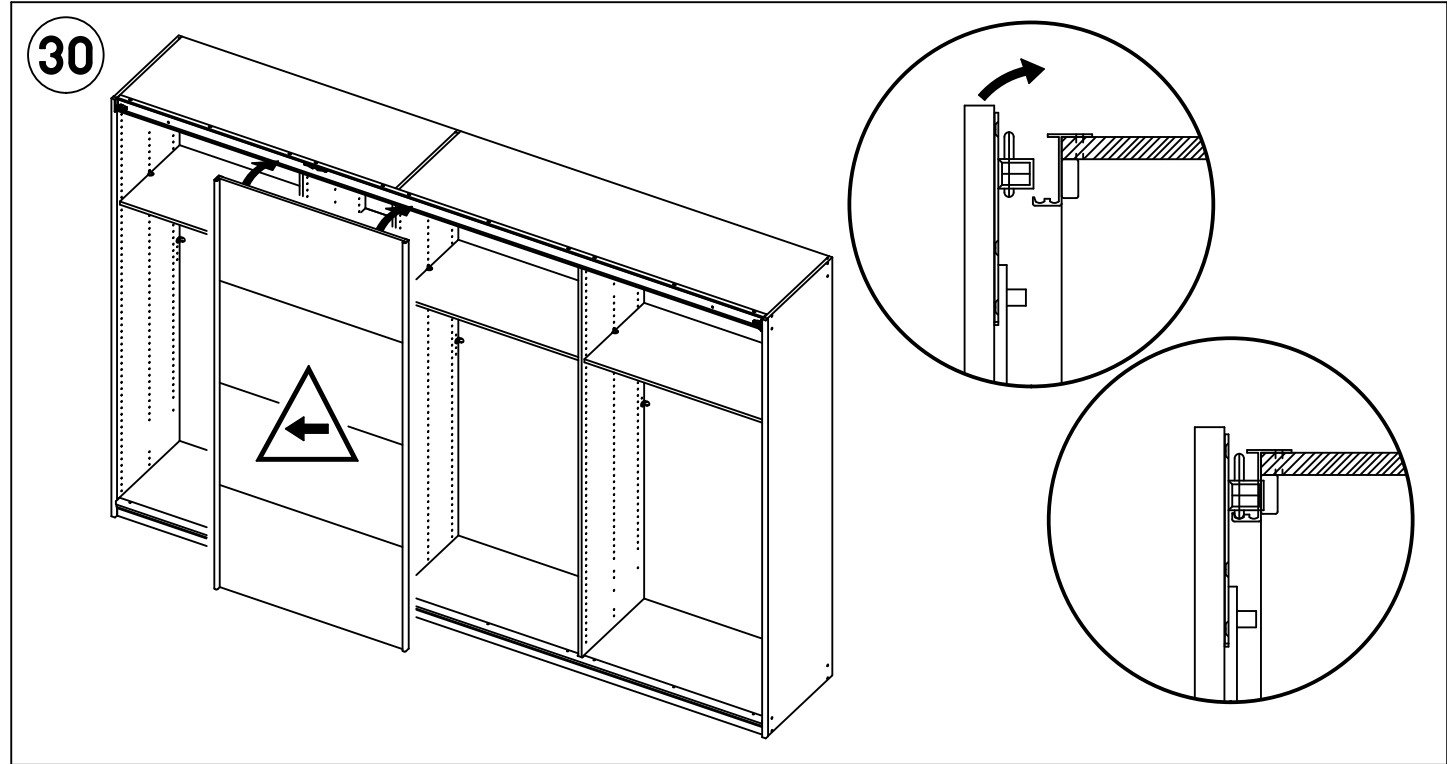
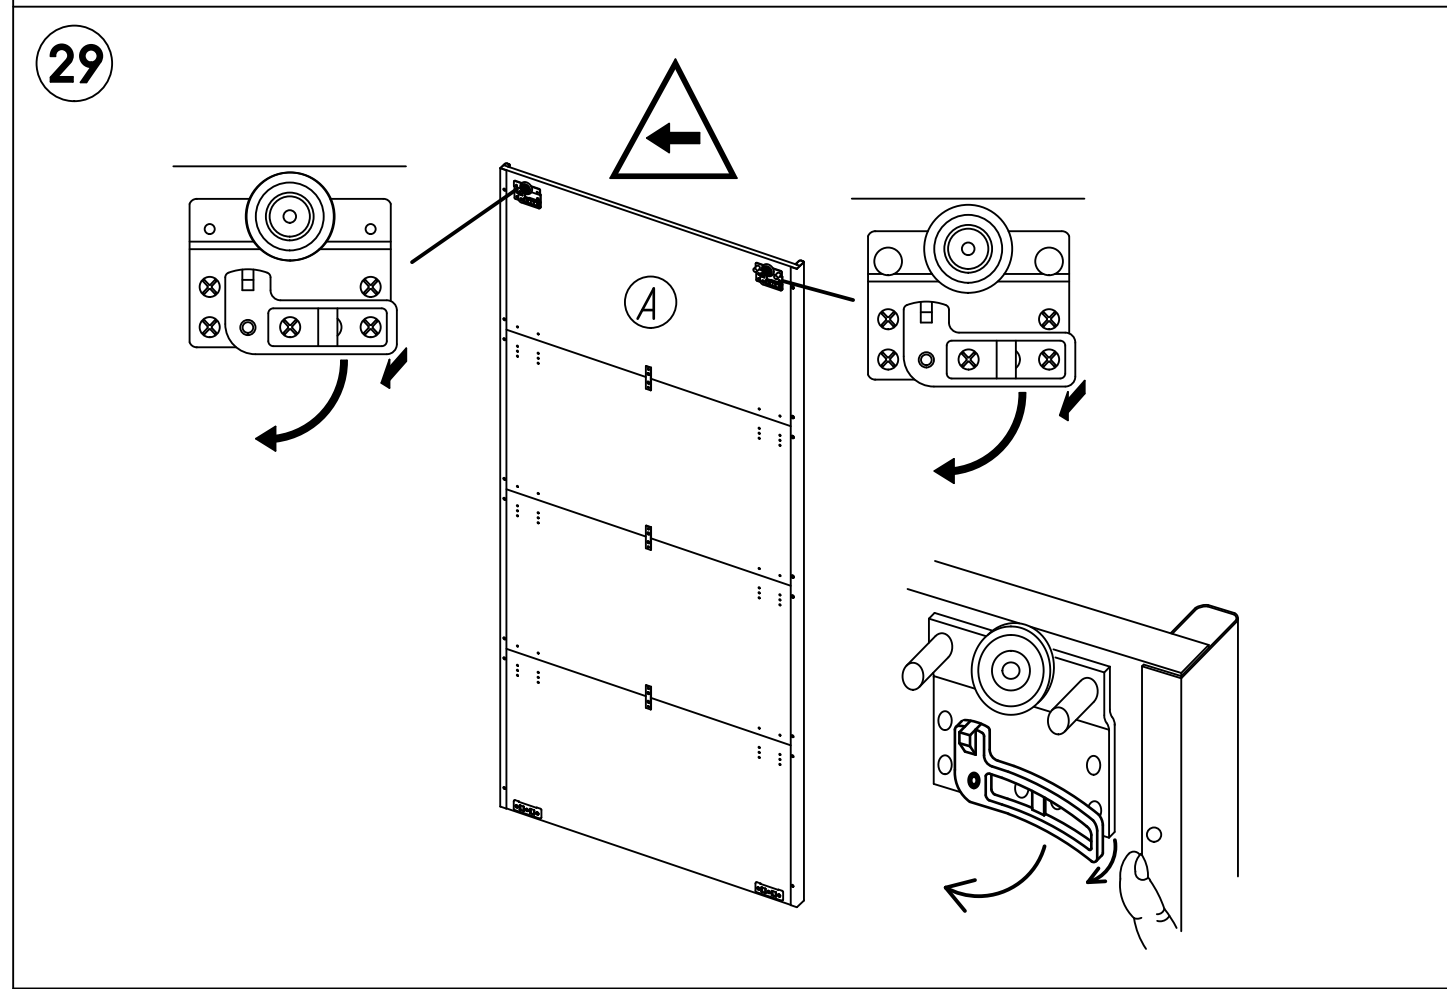
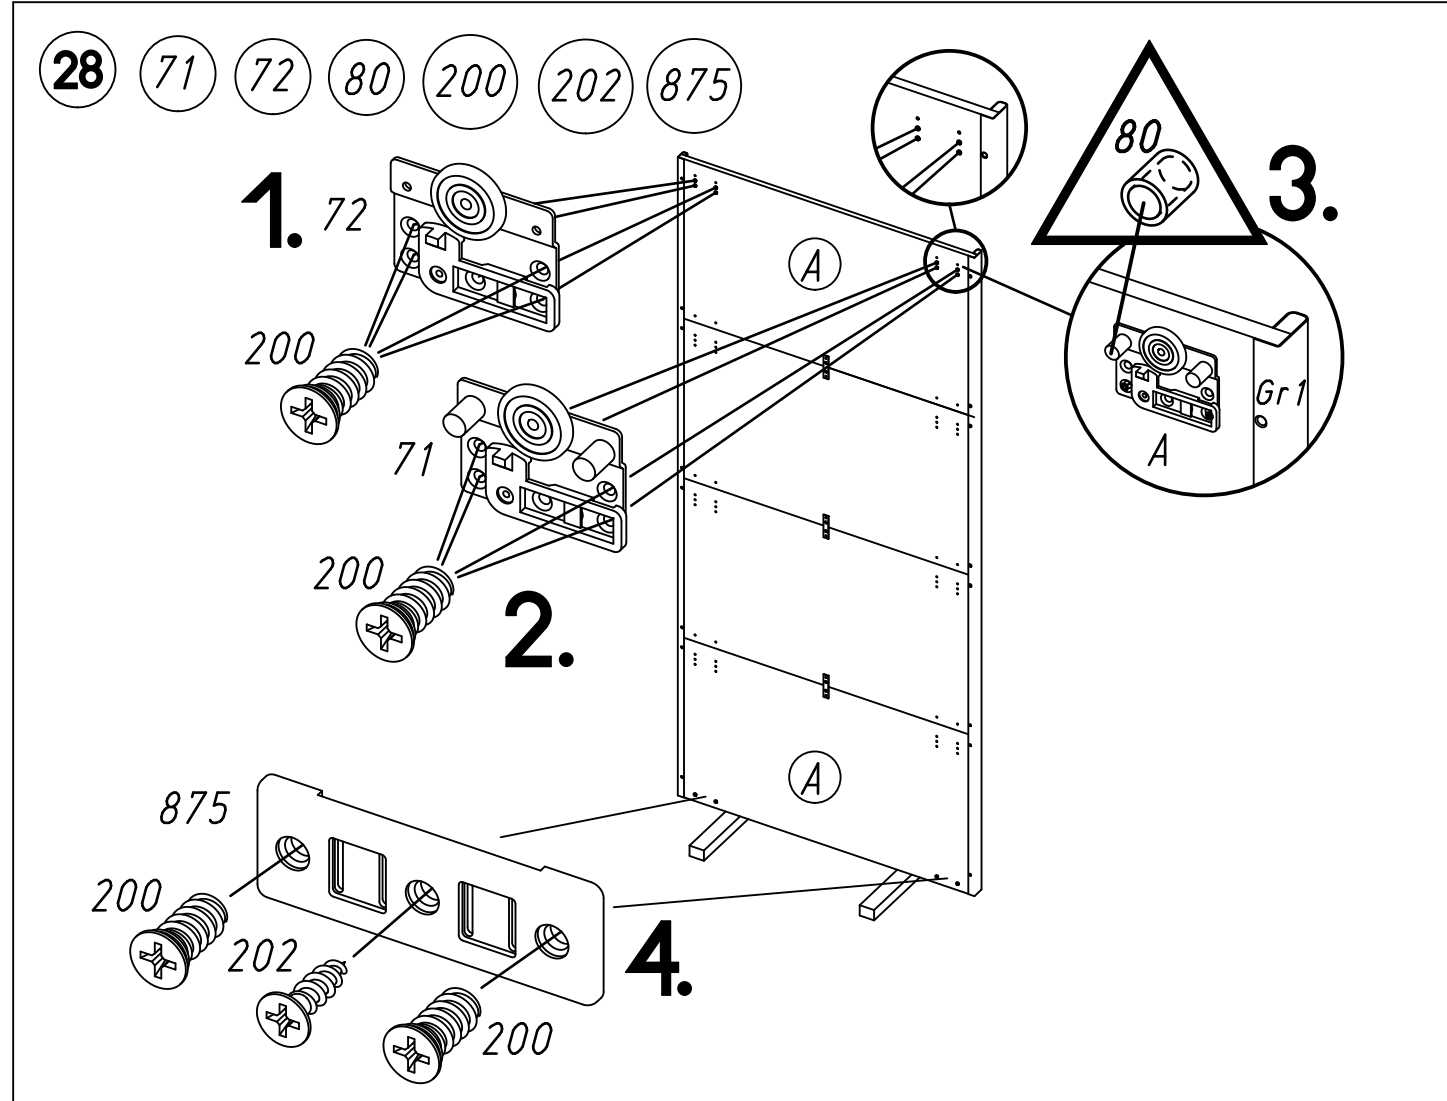


15.

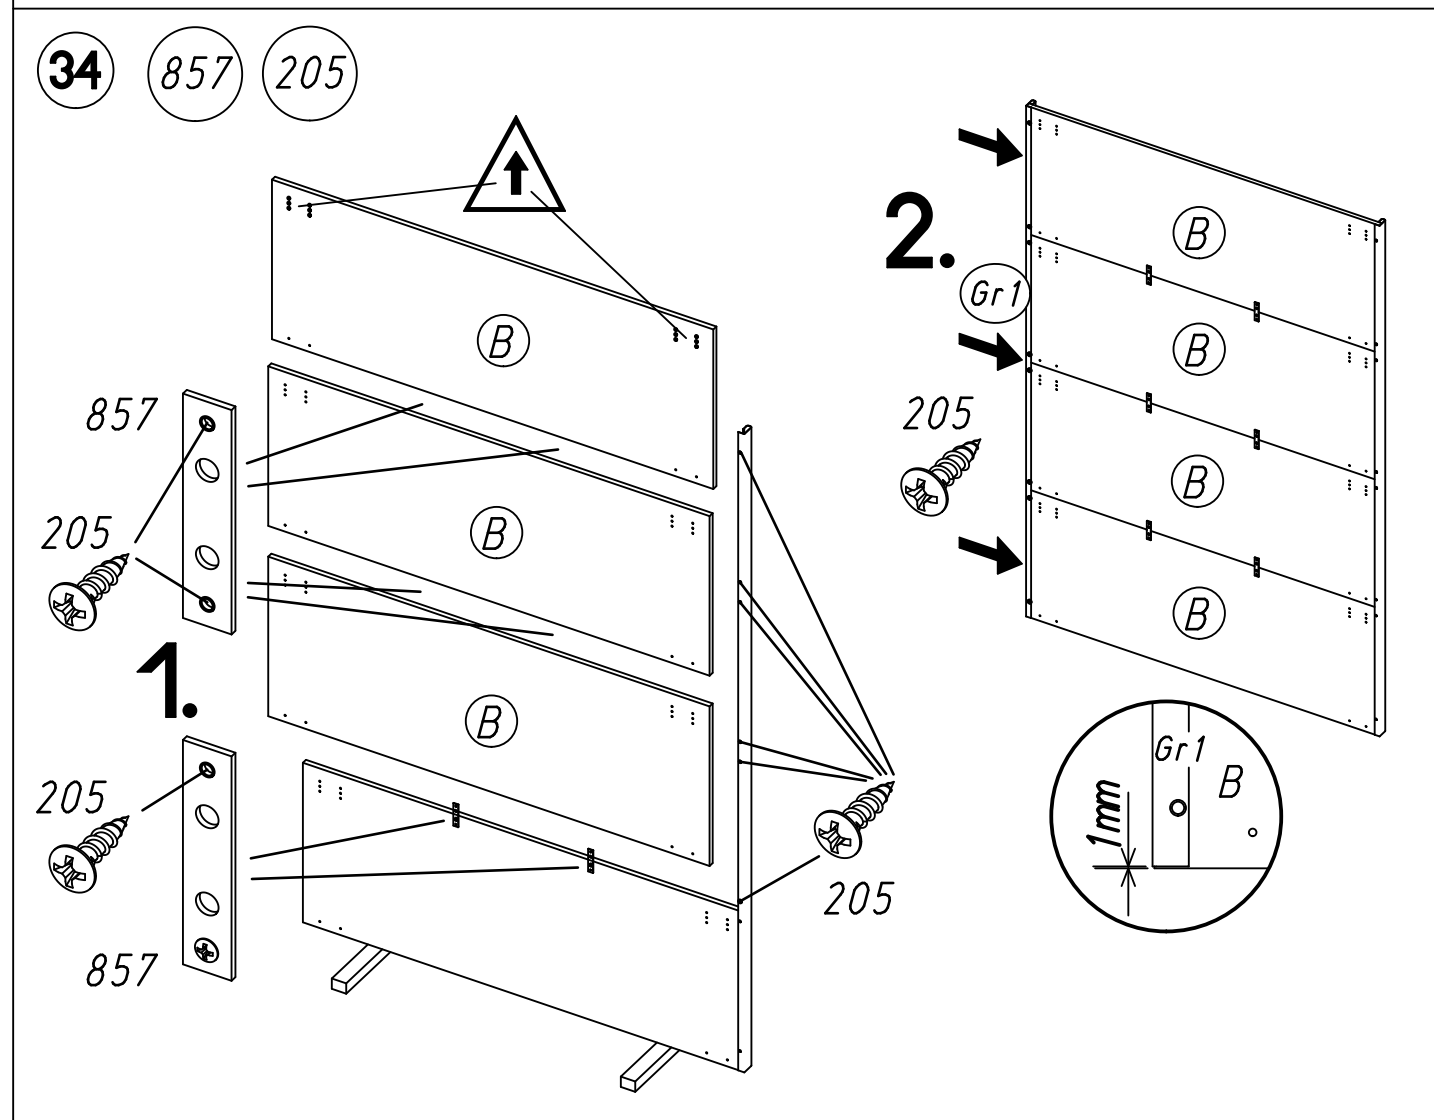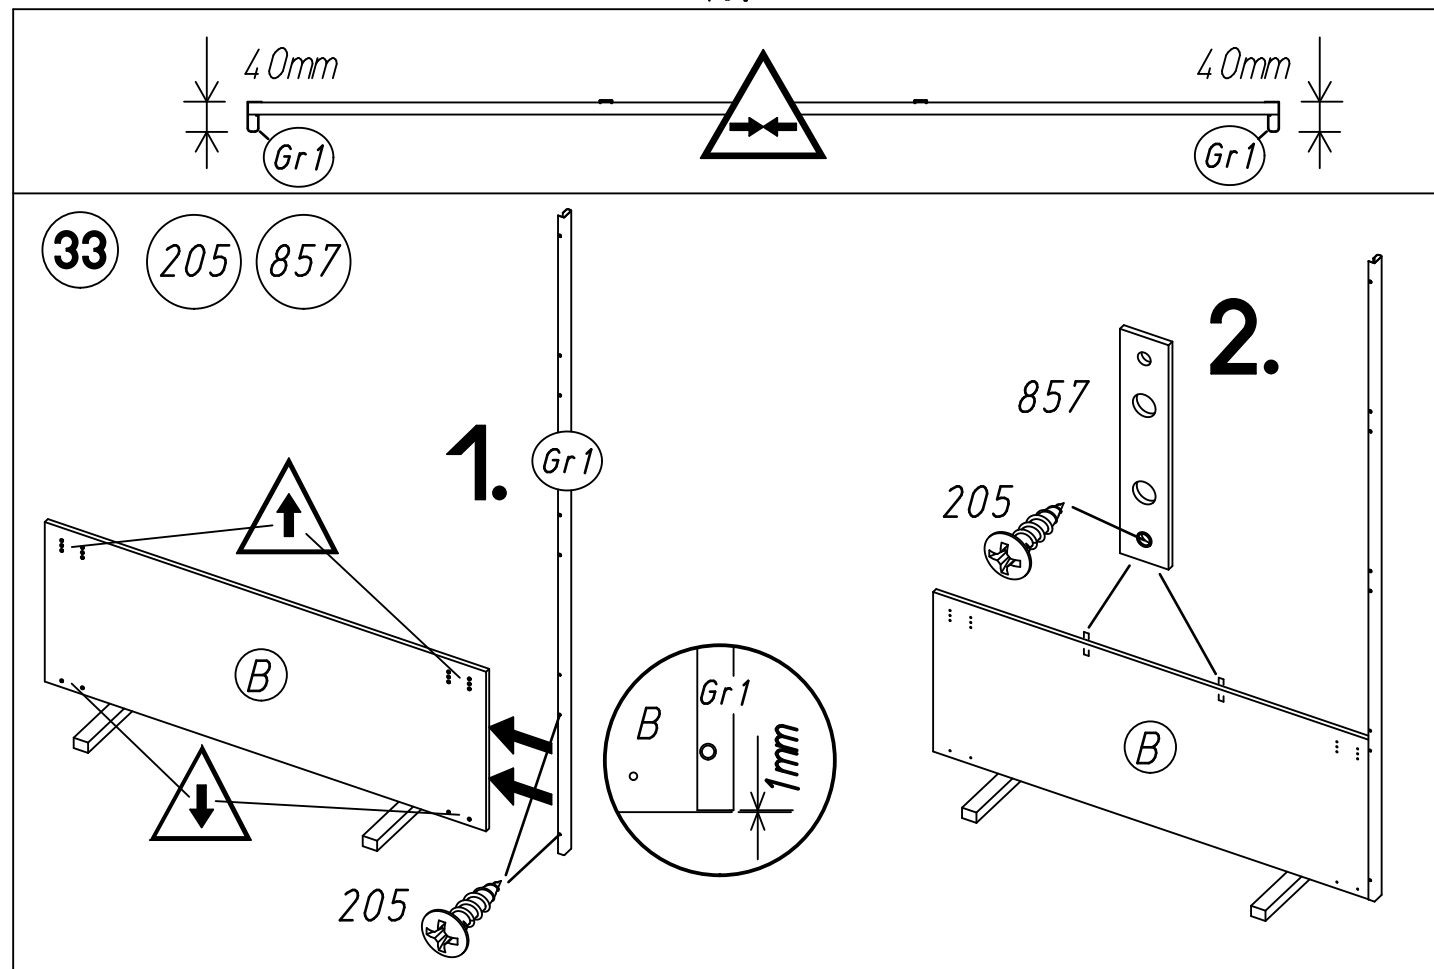

M1520

16.

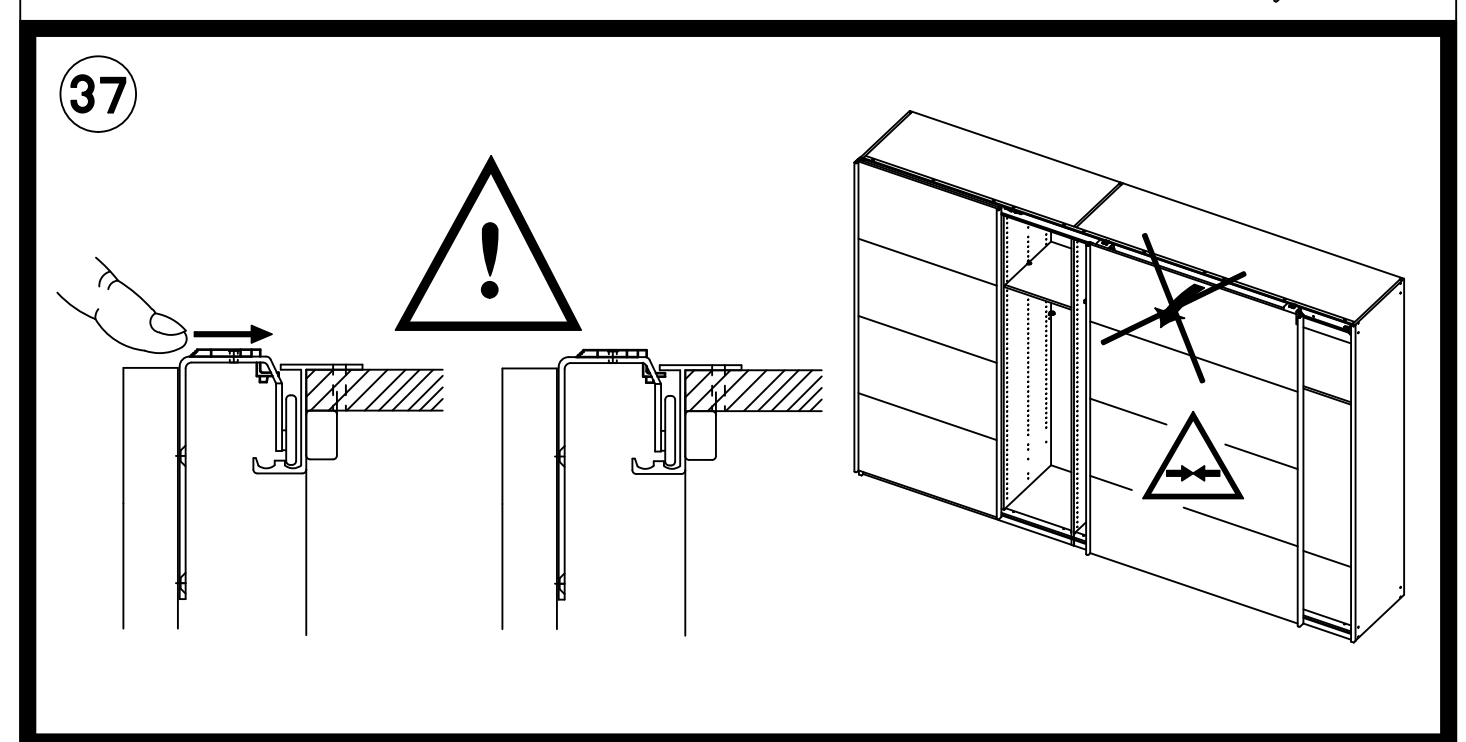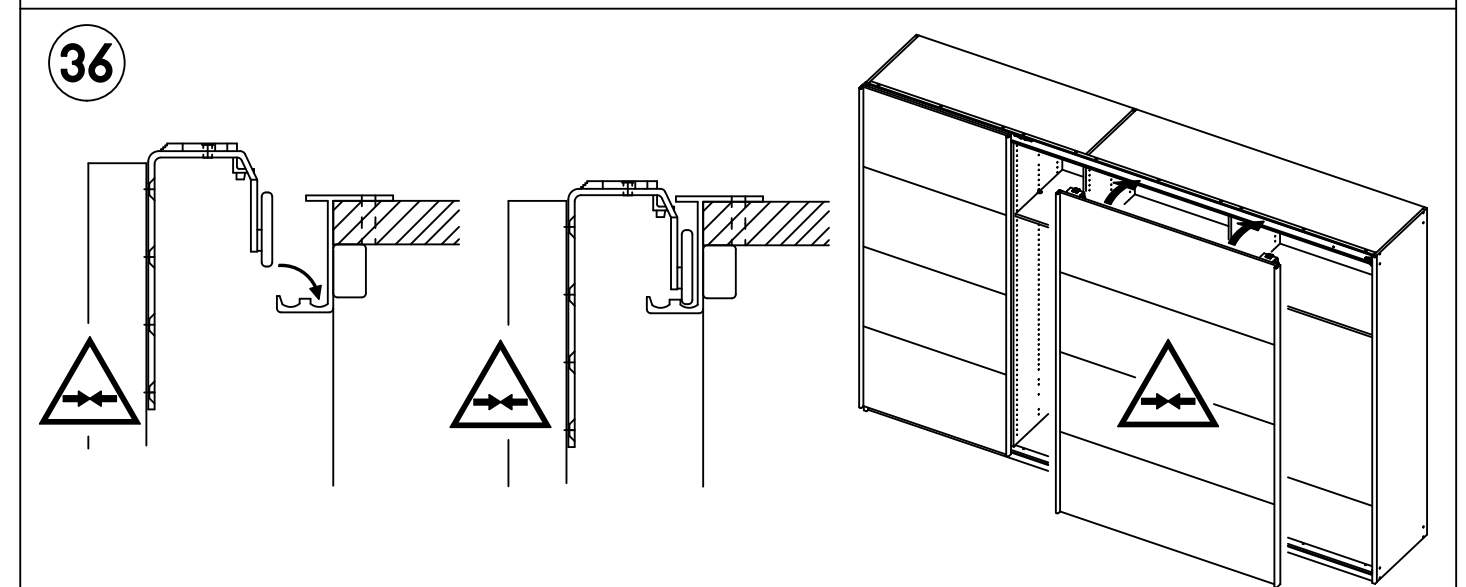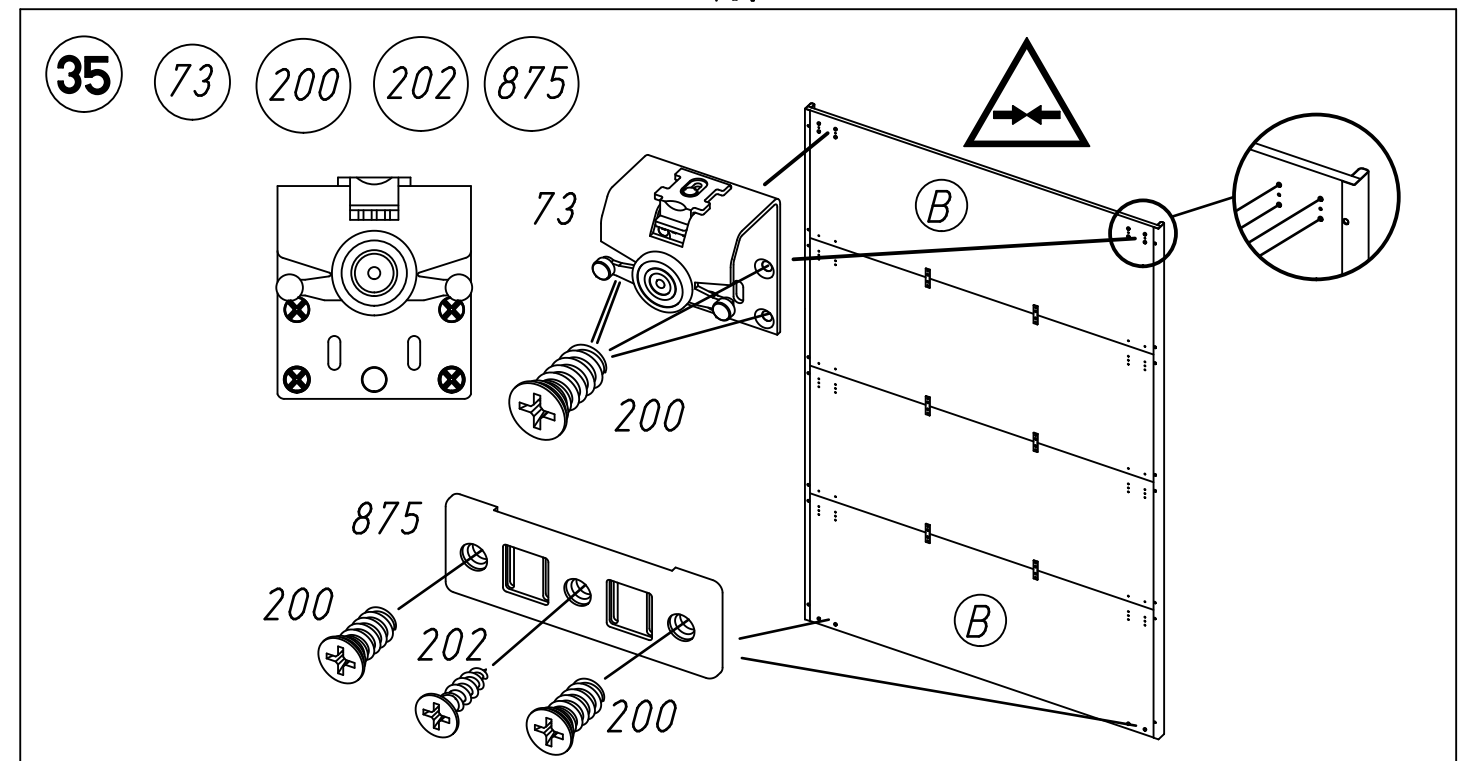

M1520

38 **877**

1. **B**

2.

1x **CLICK**

3.

4.

5. ↑ **+1x** **CLICK**

39

This diagram illustrates the step of attaching the left door to the cabinet frame. A large black arrow points from the right towards the left door panel, indicating the direction of movement. A warning symbol, consisting of a triangle with two horizontal arrows pointing outwards, is positioned on the door panel to indicate that the door should be pushed or pulled gently without forcing it. The cabinet frame is shown with its internal shelves and drawers, and the door is being aligned with the top and bottom hinges.

M1520

41 **857** **205**

1.

2.






Gr1 **C**

205

857


1mm

M1520

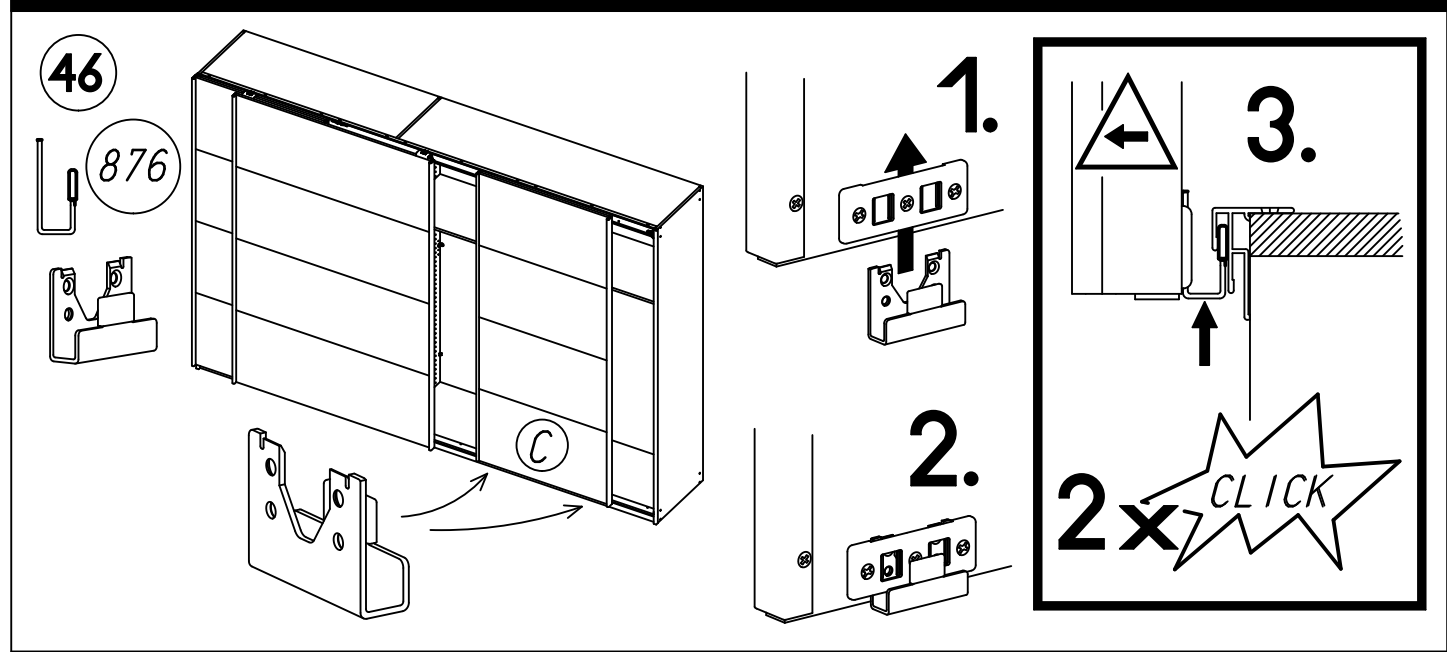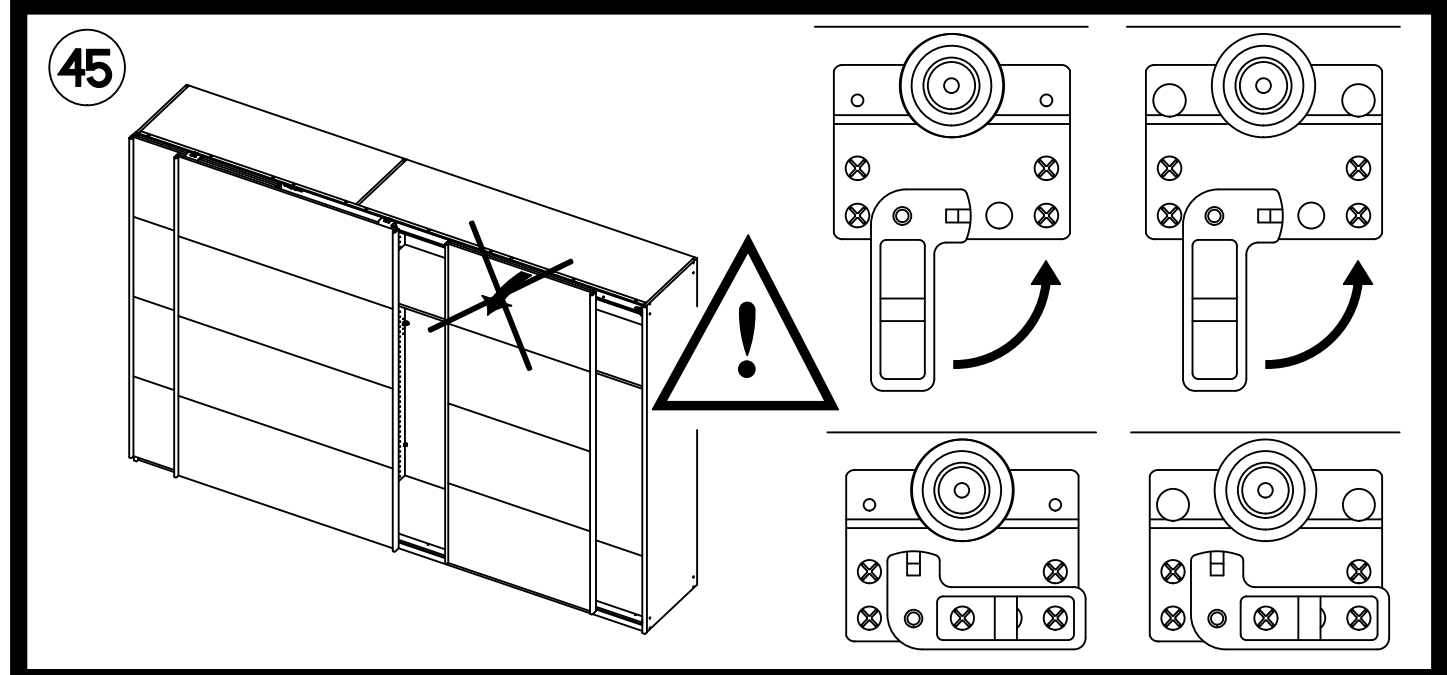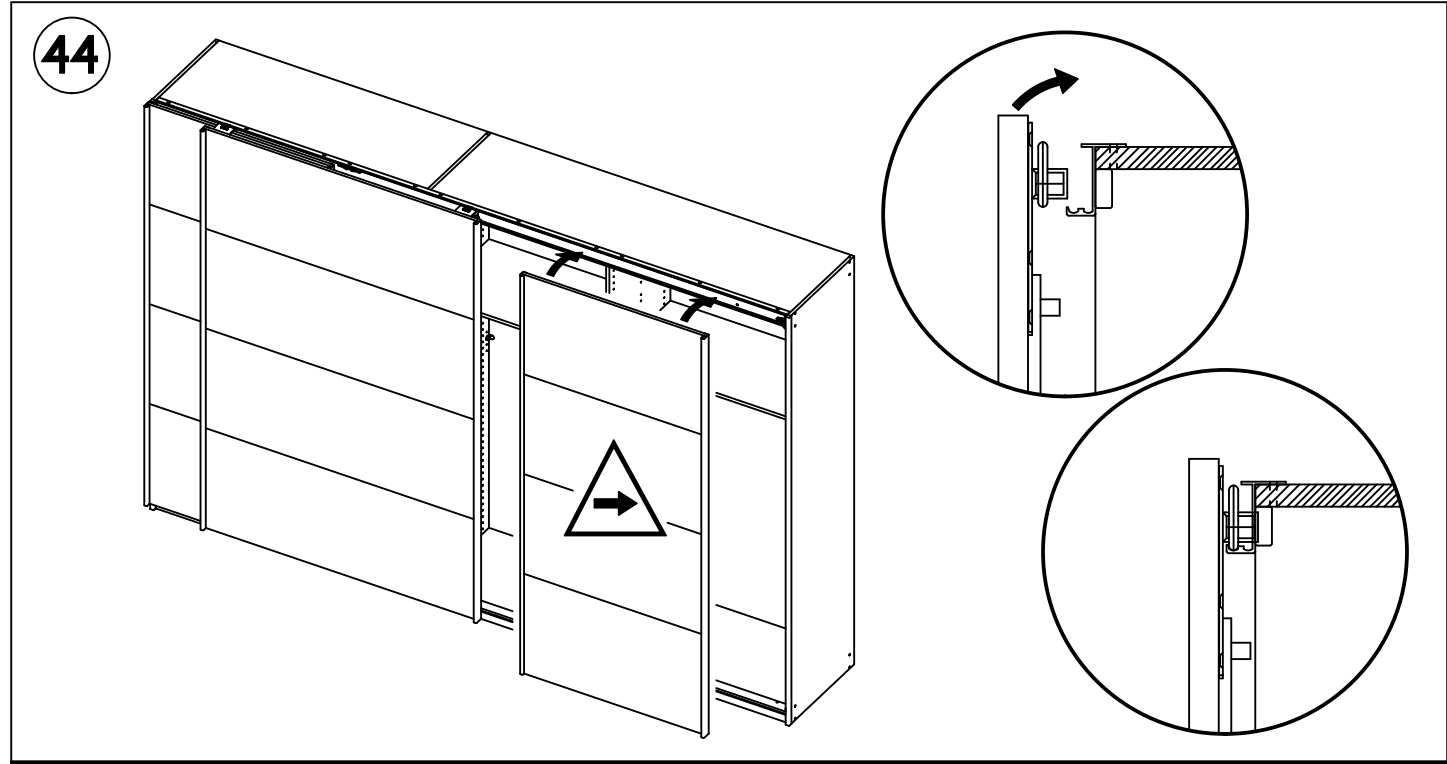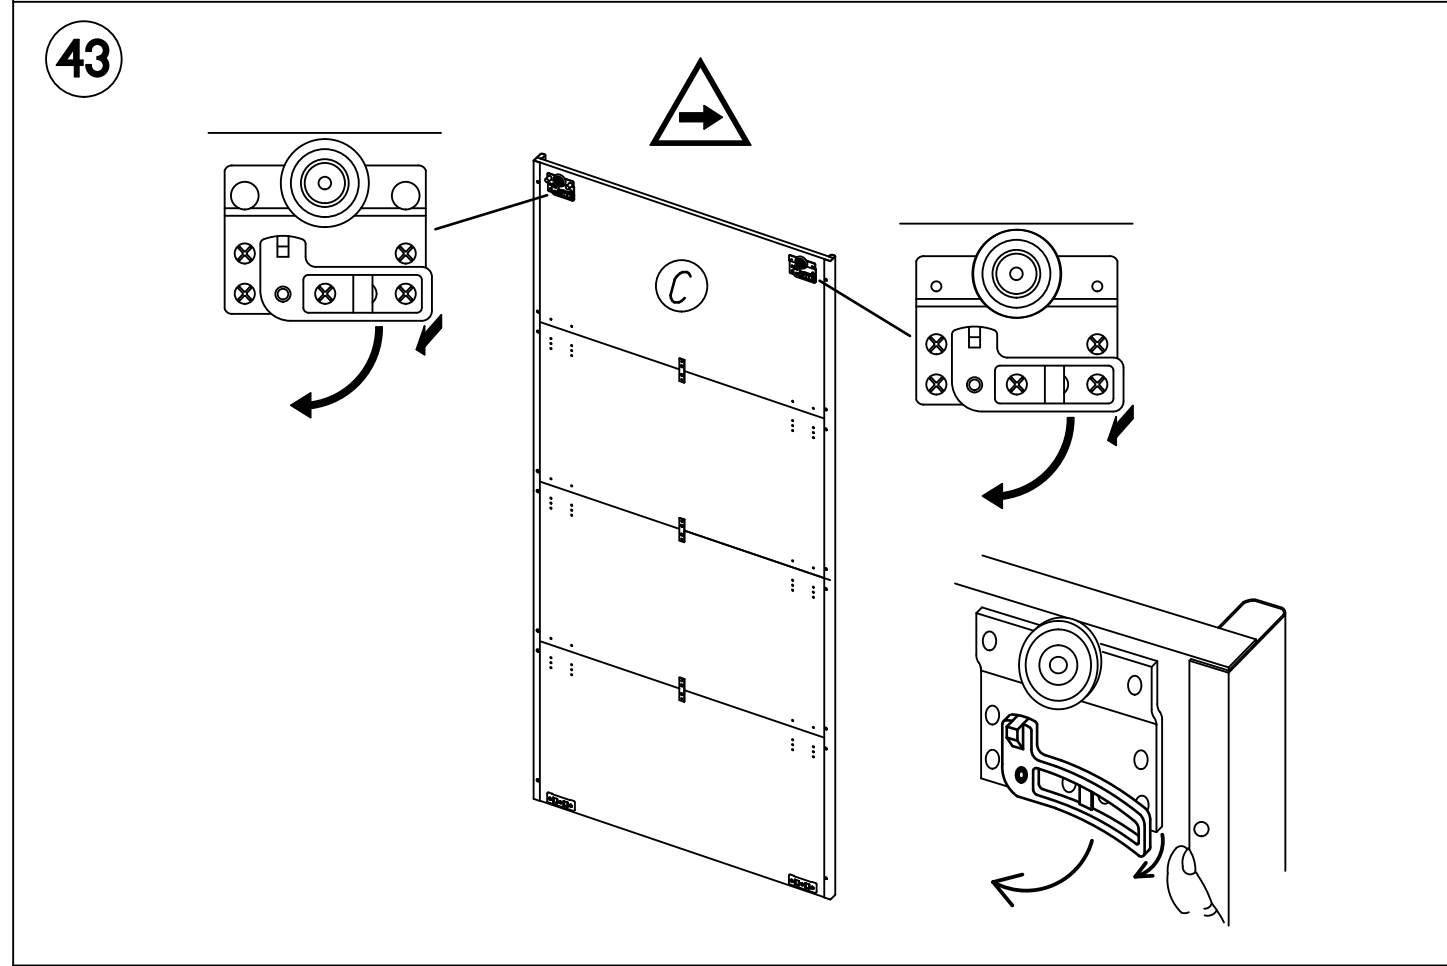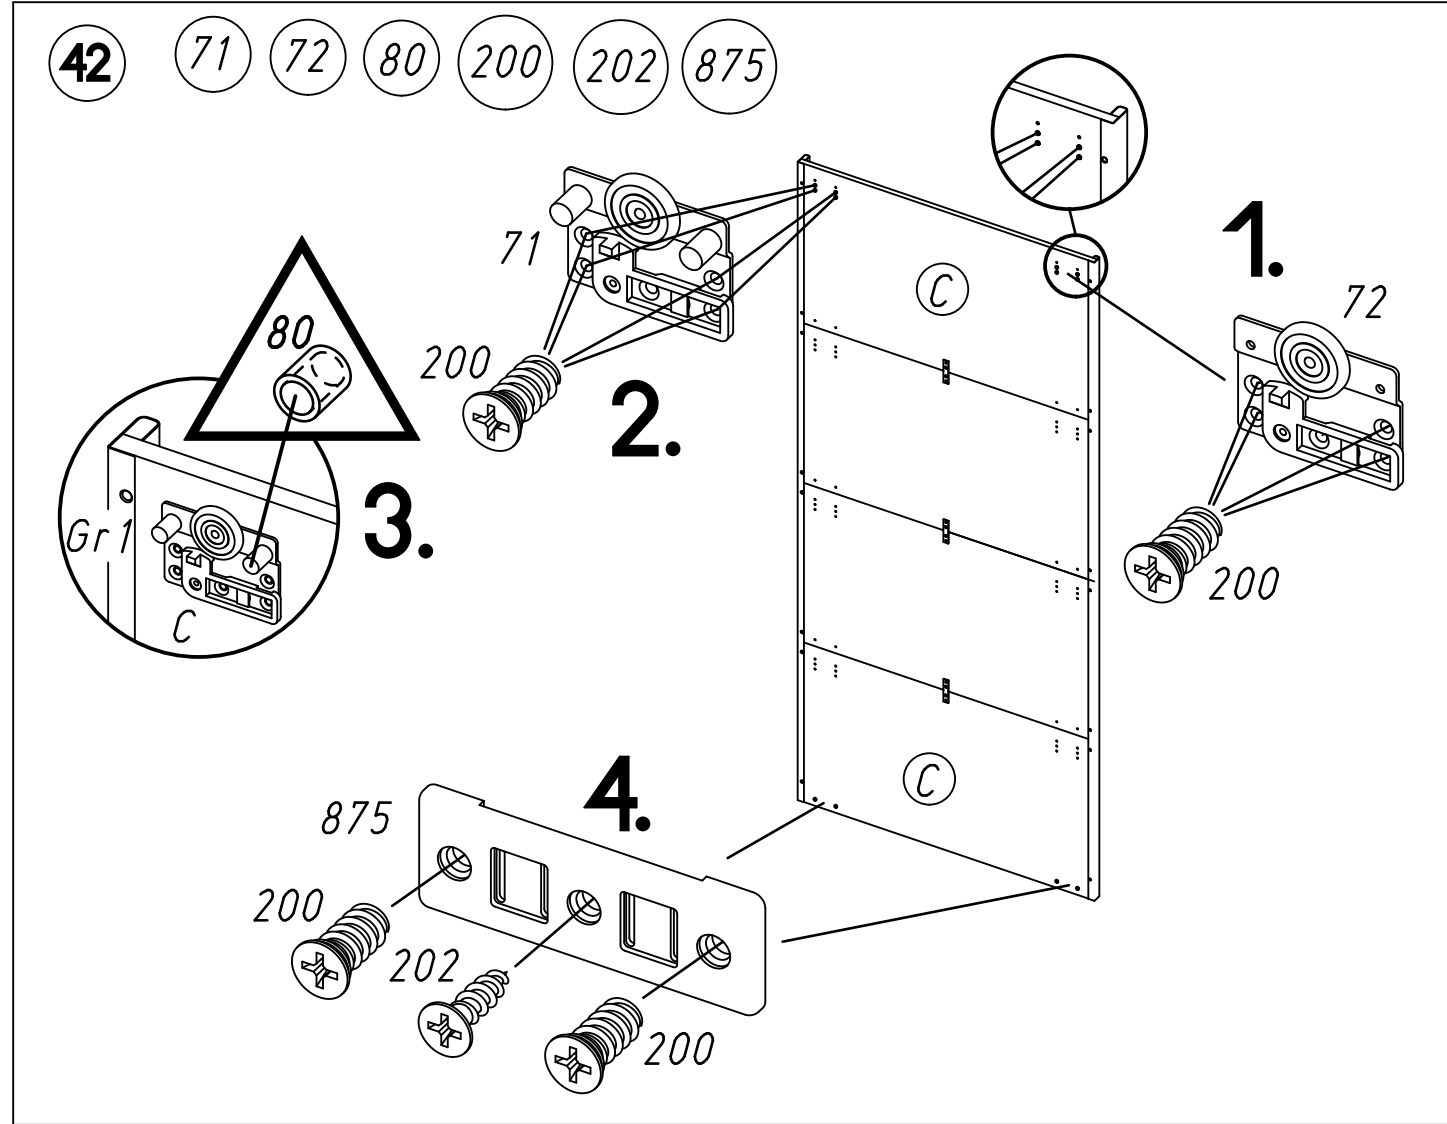

47


12

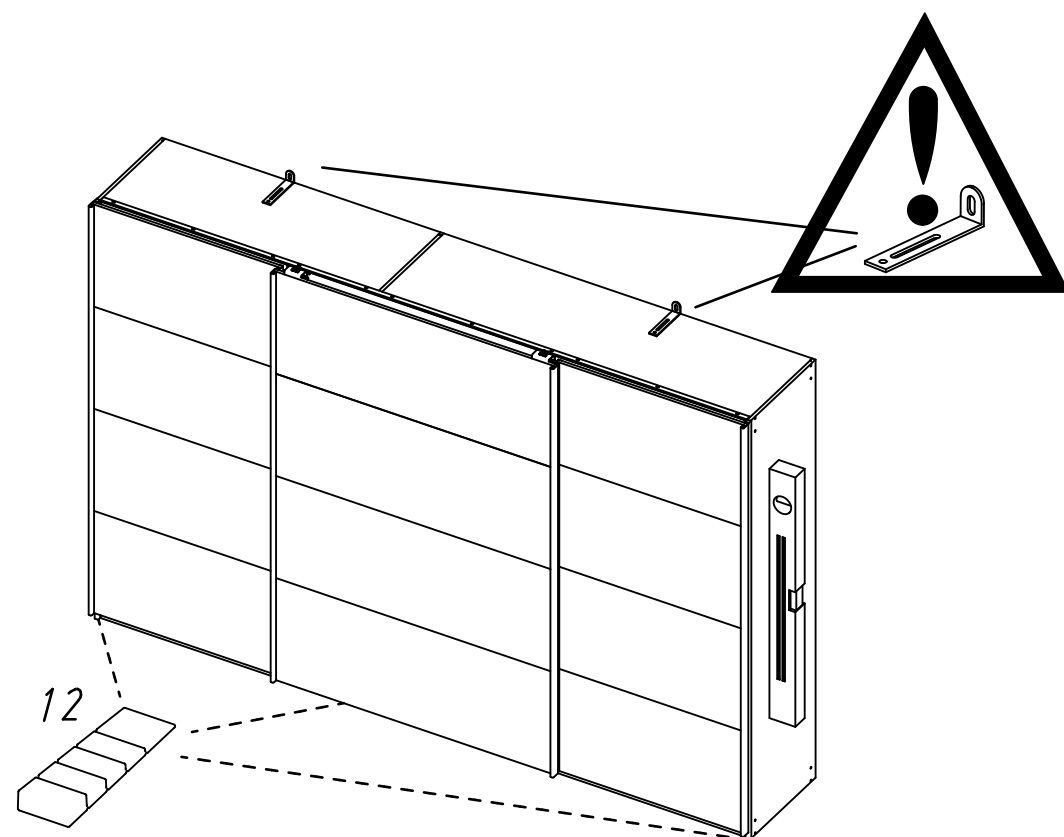


48

6362

45

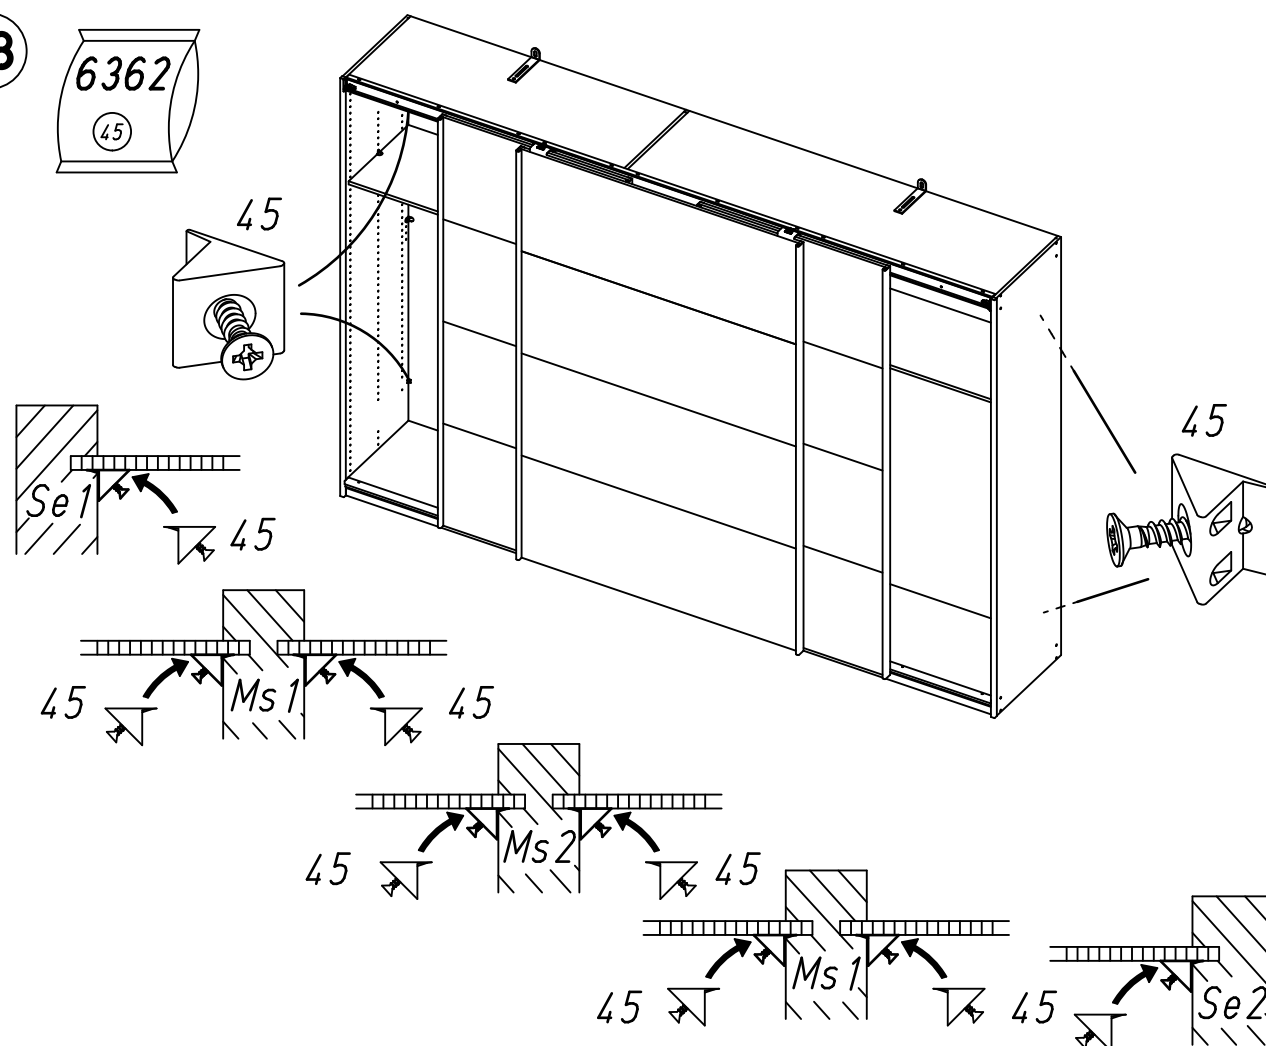

49

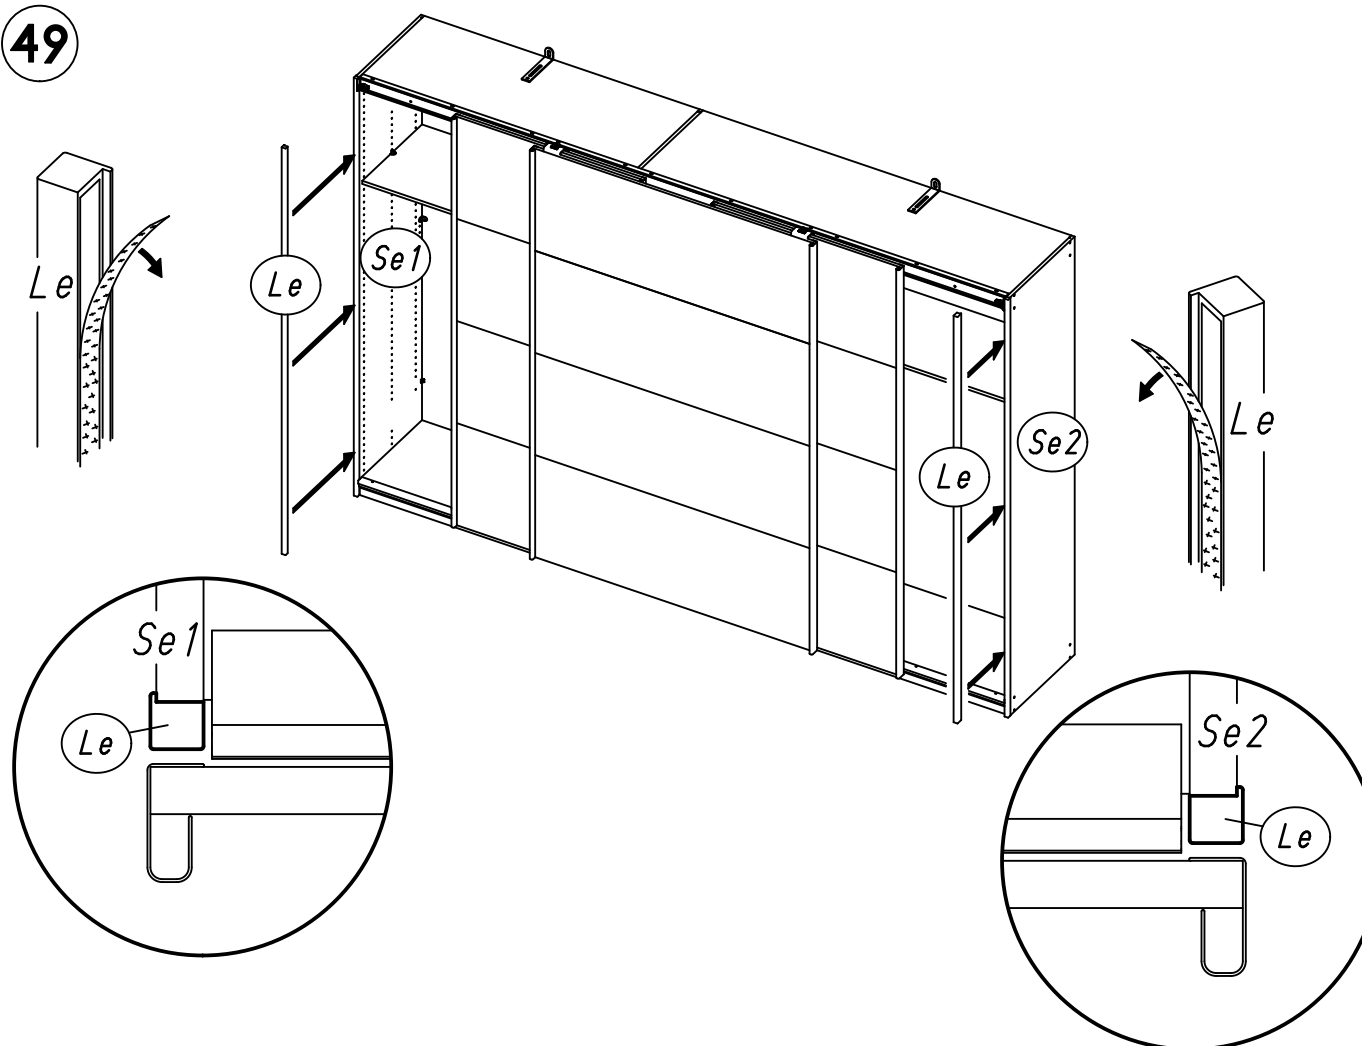

50

ABD-FOLIE
147x46

